

# Warehouse Use Only

Part #	QUANTITY
A285-60B	12
A624-49HB	1
A324-59S	1

Part #: H3005EB07B

Pick Weight: 52.99 lbs.

Packaging: PC (8") 2x  
PD (6") 8x

**Packer**

Initials

Invoice #

Box 1 AA/AB

Date / /  AM  PM



Ship Weight: 58 lbs.

Time :

Dimensions: 68" x 9" x 8"

**Pack Time .35**

**Box 1 of 3**

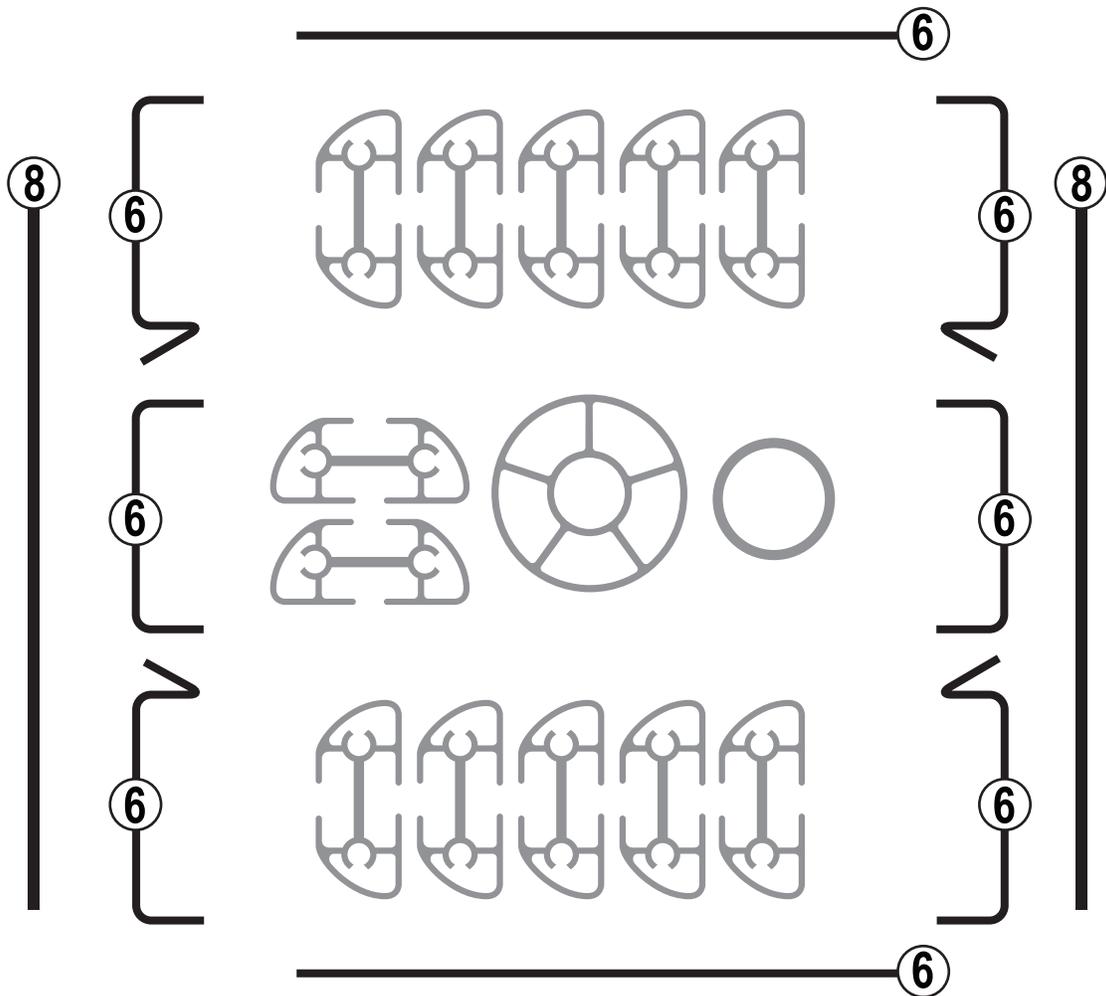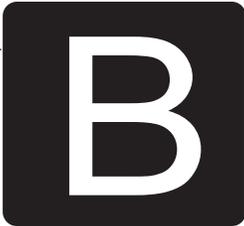



# Warehouse Use Only

Part #	QUANTITY
R44B	2
R45B	4

Part #: H3005EB07B  
Pick Weight: 35.17 lbs.

**Packer**

Initials

Packaging: PC (8") 4x  
PD (6") 8x

Invoice #

Date / /  AM  PM

Box 1 AA/AB


Time :

Ship Weight: 40 lbs.

Dimensions: 65" x 9" x 8"

**Pack Time .35**

**Box 2 of 3** **B**

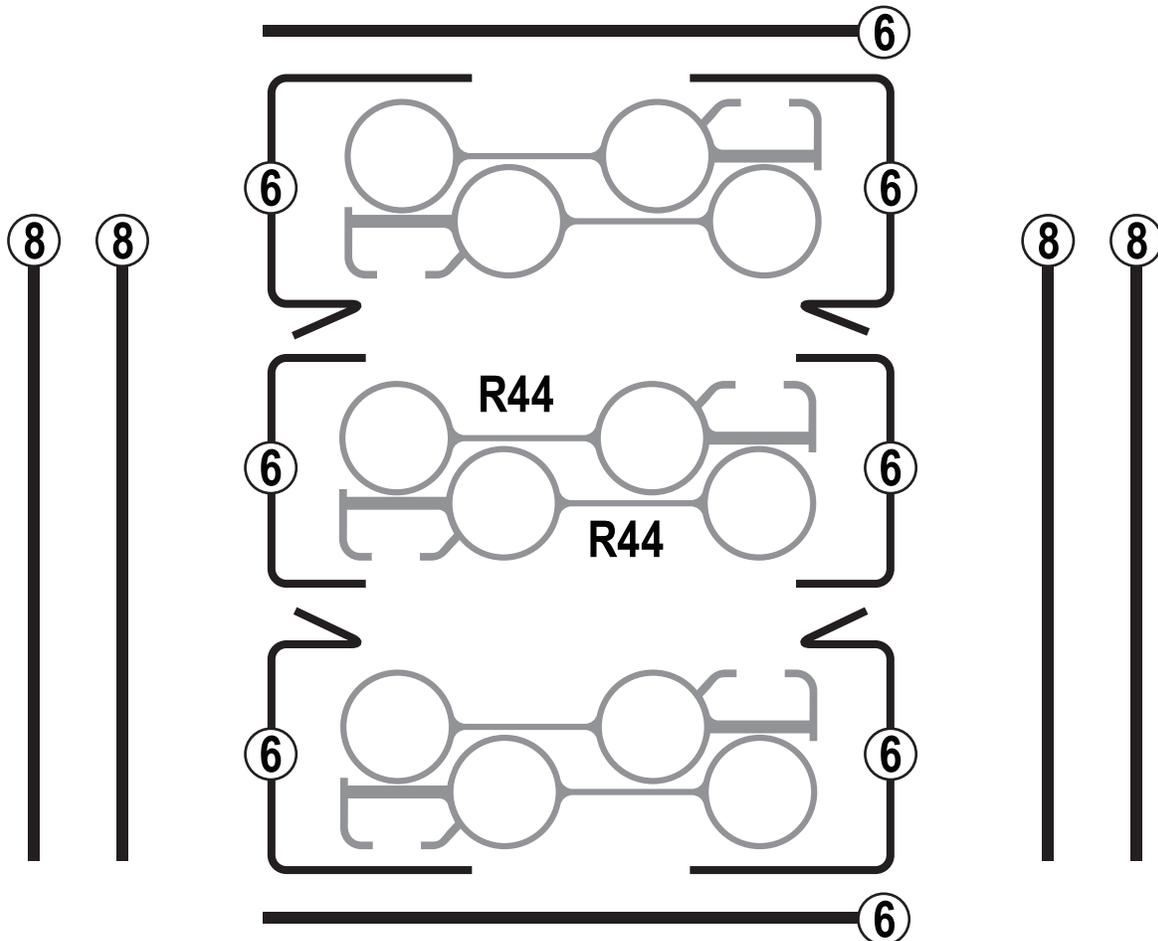



# Warehouse Use Only

Part #	QUANTITY
H202	4
H203	8
H73B	8
BG559	14
C06B	2
A33D	1
A33P	1
A620-70B	2
D117	2
D231	2
D242	2
D281	2

Part #: H3005EB07B

Pick Weight: 21.37 lbs.

Exterior Box BD

Interior Boxes BH 2x

Ship Weight: 24 lbs.

Dimensions: 18 x 13 x 11

**Packer**

Invoice #

Date / /  AM  PM

Time :

**Pack Time .35**


**Box 3 of 3** 






**Van & Truck  
Cargo System**

Vantech USA www.vantech.com

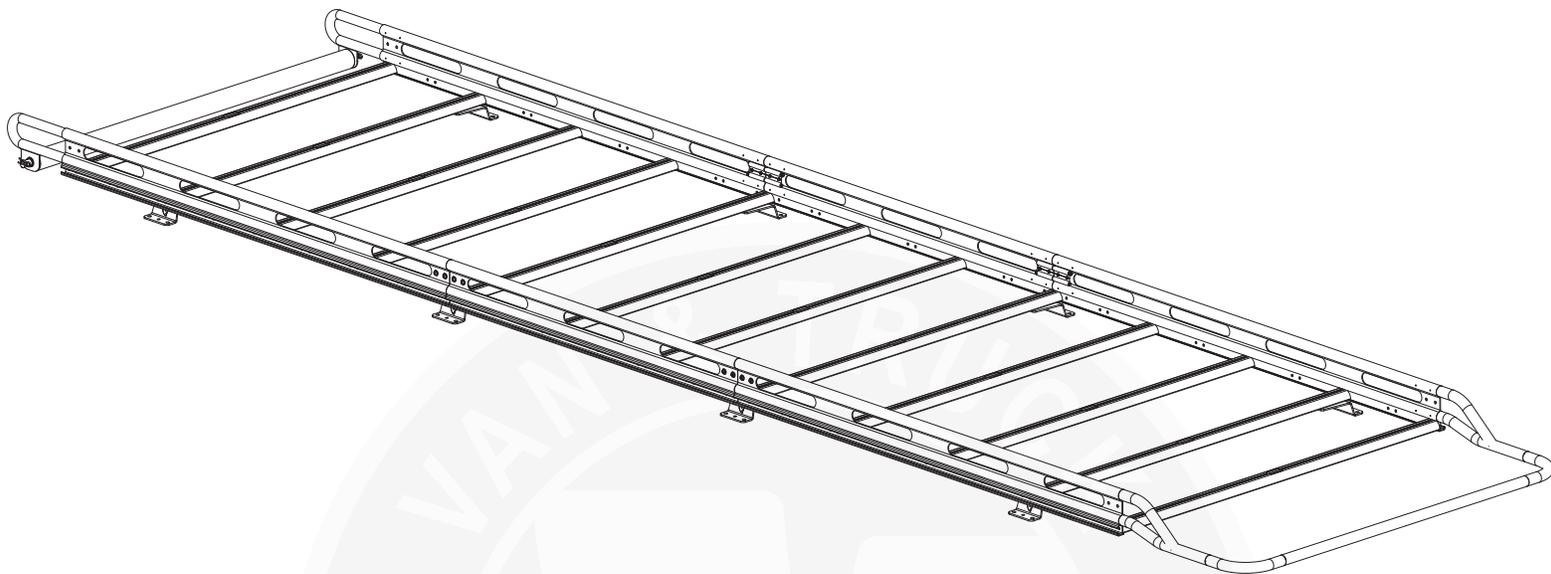

### PRODUCT INFO

Part #: H3005EB07B  
 System: H2.1 Series  
 Material: Aluminum  
 Fitment: Mercedes Benz  
 Sprinter High Roof 07-On 170" WB  
 Extended  
 Color: Black  
 Requirement: Factory/R30 Track (Not Included)

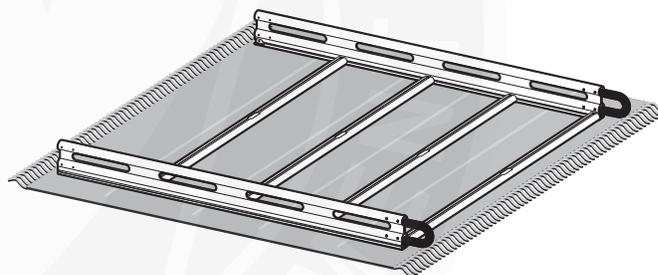


**To prevent damage  
install rack over a  
carpet or cardboard**

### REQUIRED TOOLS

1/2"  
Wrench



Power Tool w/  
Phillips Head

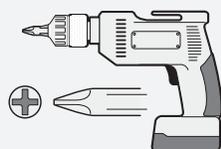


5/32"  
Allen Key



3/16"  
Allen Key








1/4"  
Allen Key





Rubber  
Mallet

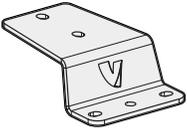



ITEM	DESCRIPTION	QTY	ITEM	ITEM	DESCRIPTION	QTY	ITEM
S052	5/16" DOUBLE SLIDER (2" BOLT TO BOLT)	8		H73	MOUNTING BASE	8	
S053	5/16" DOUBLE SLIDER (3" BOLT TO BOLT)	8		A285-60	2.25" X 1" X 60" CROSS BAR	12	
W008	5/16" X 3/4" WASHER	48		R44	47.25" CARGO RAIL	2	
W022	5/16" LOCK WASHER	32		R45	63" CARGO RAIL	4	
N002	5/16" NUT	16		A324-59	59" ROLLER	1	
N005	5/16" NYLOC NUT	16		A624-49	49" CONNECTING BAR	1	
B103	1/4" X 1" BUTTON HEAD ALLEN BOLT	48		C06	6" ELBOW	2	
B115	5/16" X 1.2" BUTTON HEAD ALLEN BOLT	16		A33D	DRIVER SIDE ROLLER U-BRCE	1	
B201	TAP SCREW	24		A33P	PASSENGER SIDE ROLLER U-BRACE	1	
H202	H2 CONNECTOR	4		A620-70	CANTILEVER (E)	2	
H203	CONNECTOR GUIDE	8					
BG559	RUBBER BAR GUARD	14					

## RUBBER BAR GUARD



- Press the rubber bar guard into the channels of cross bars
- The 2 extra bar guards are installed under the first 2 cross bars

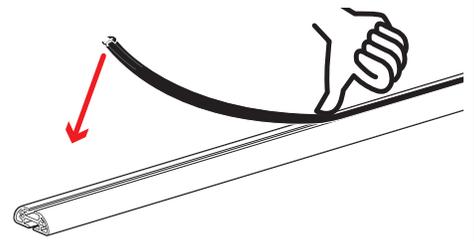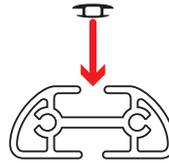


# Section 1

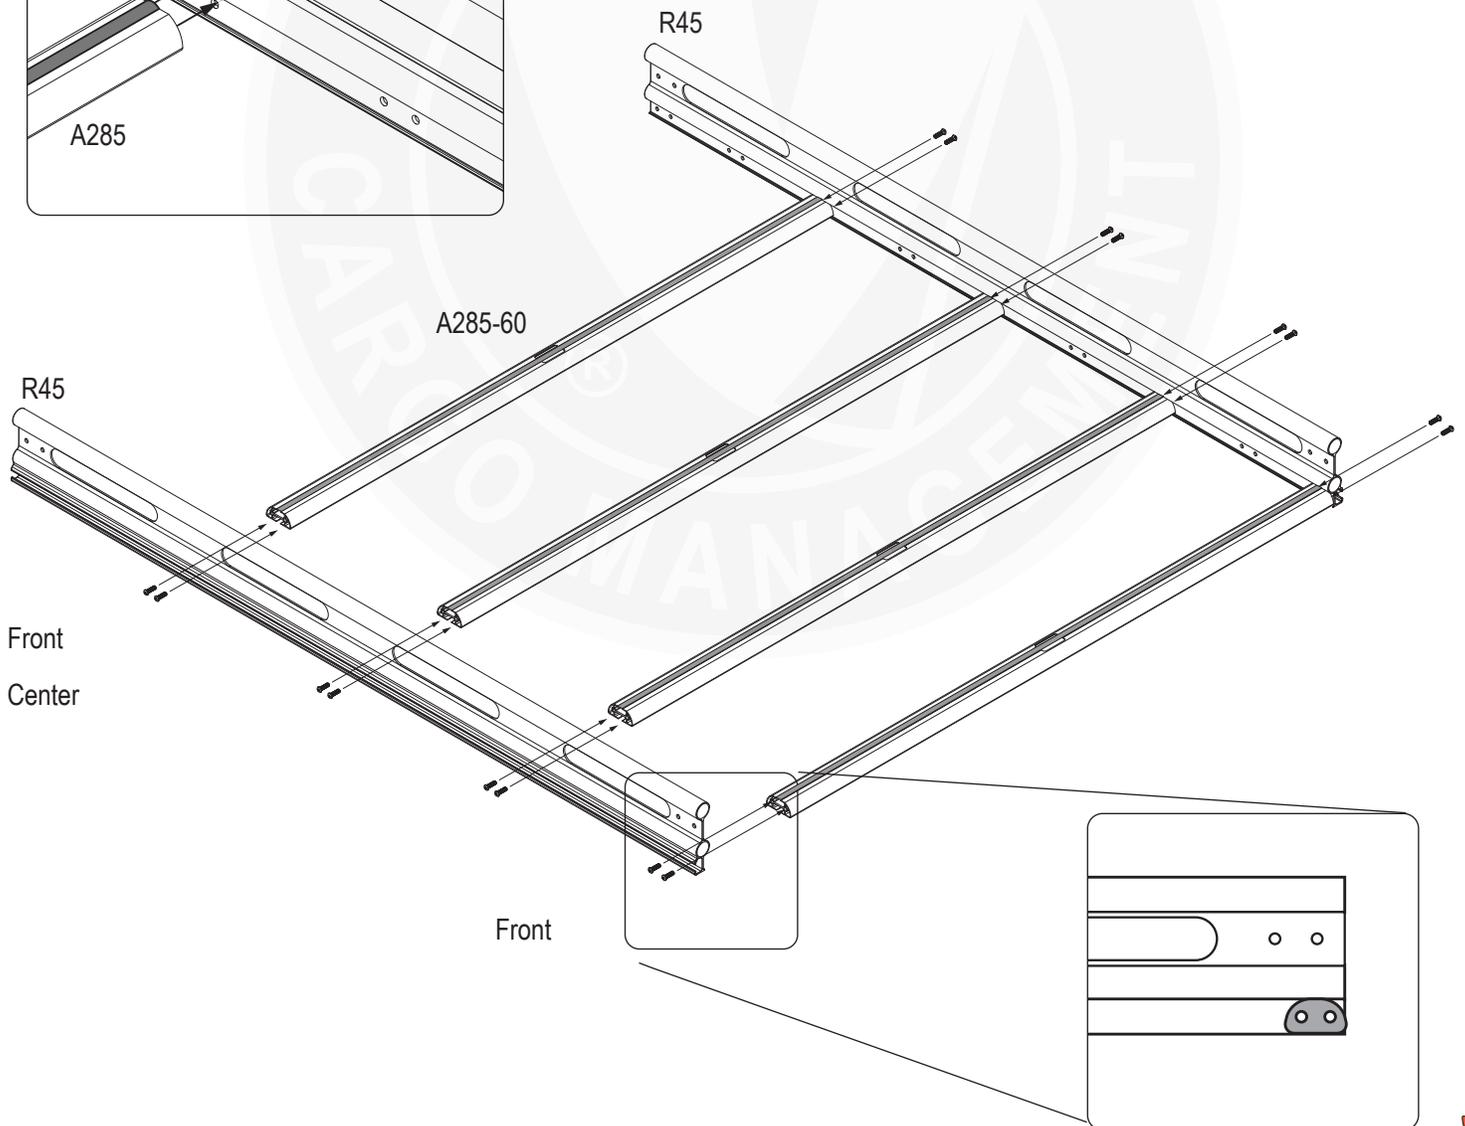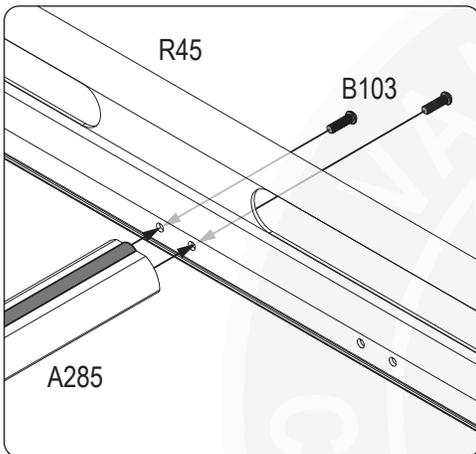




# Section 1

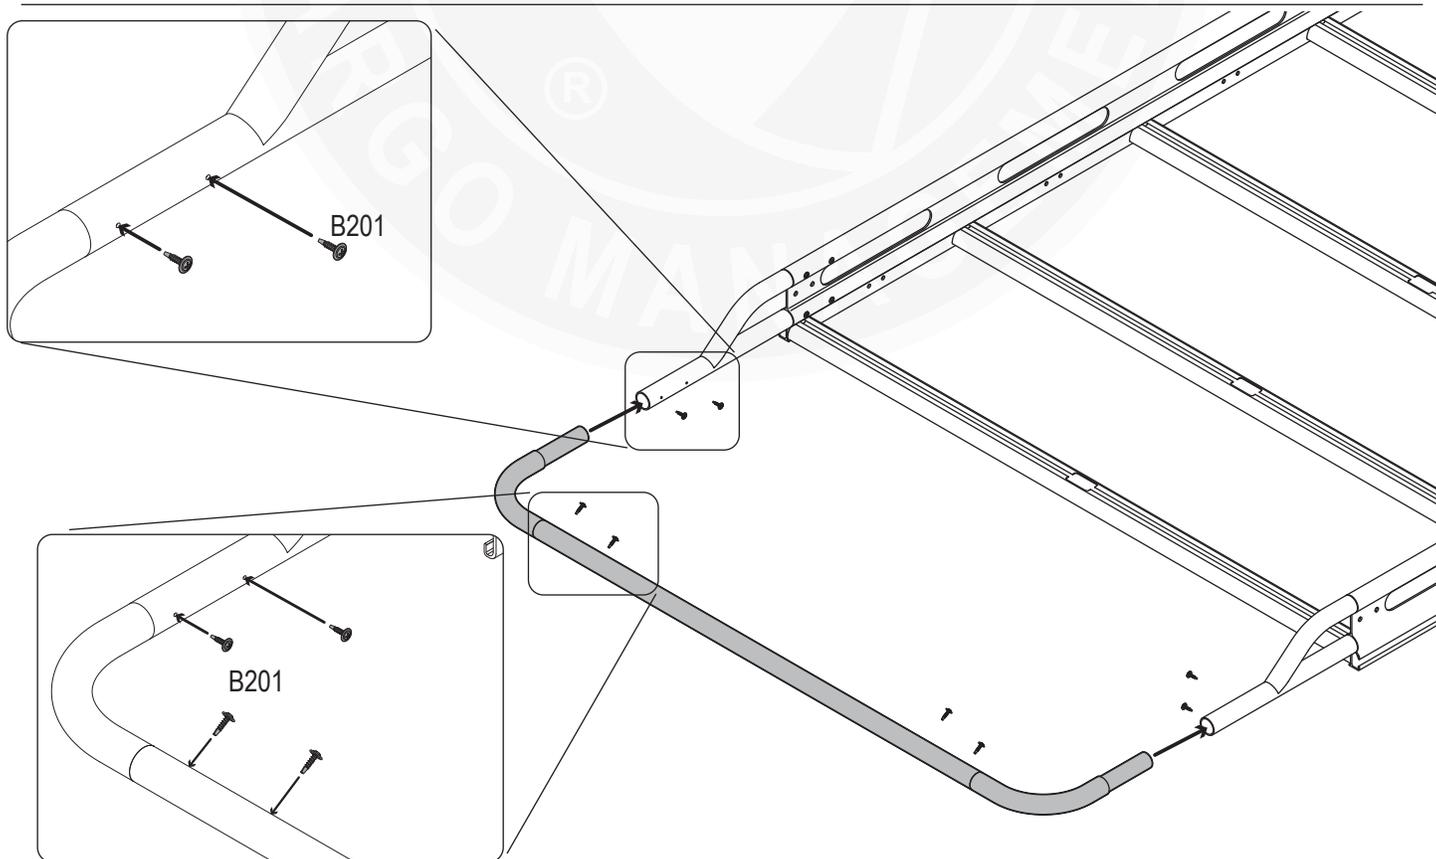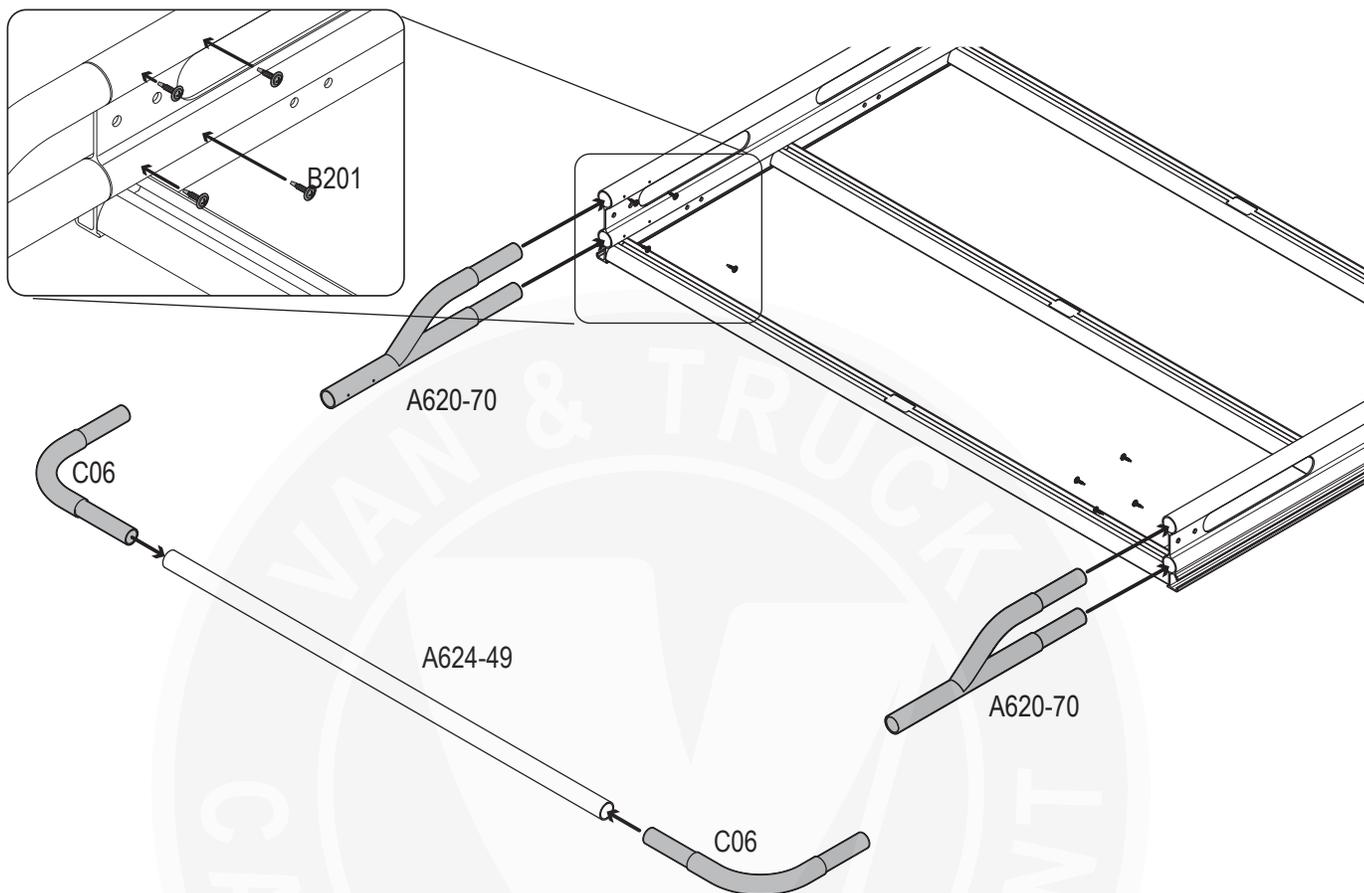

# Section 2


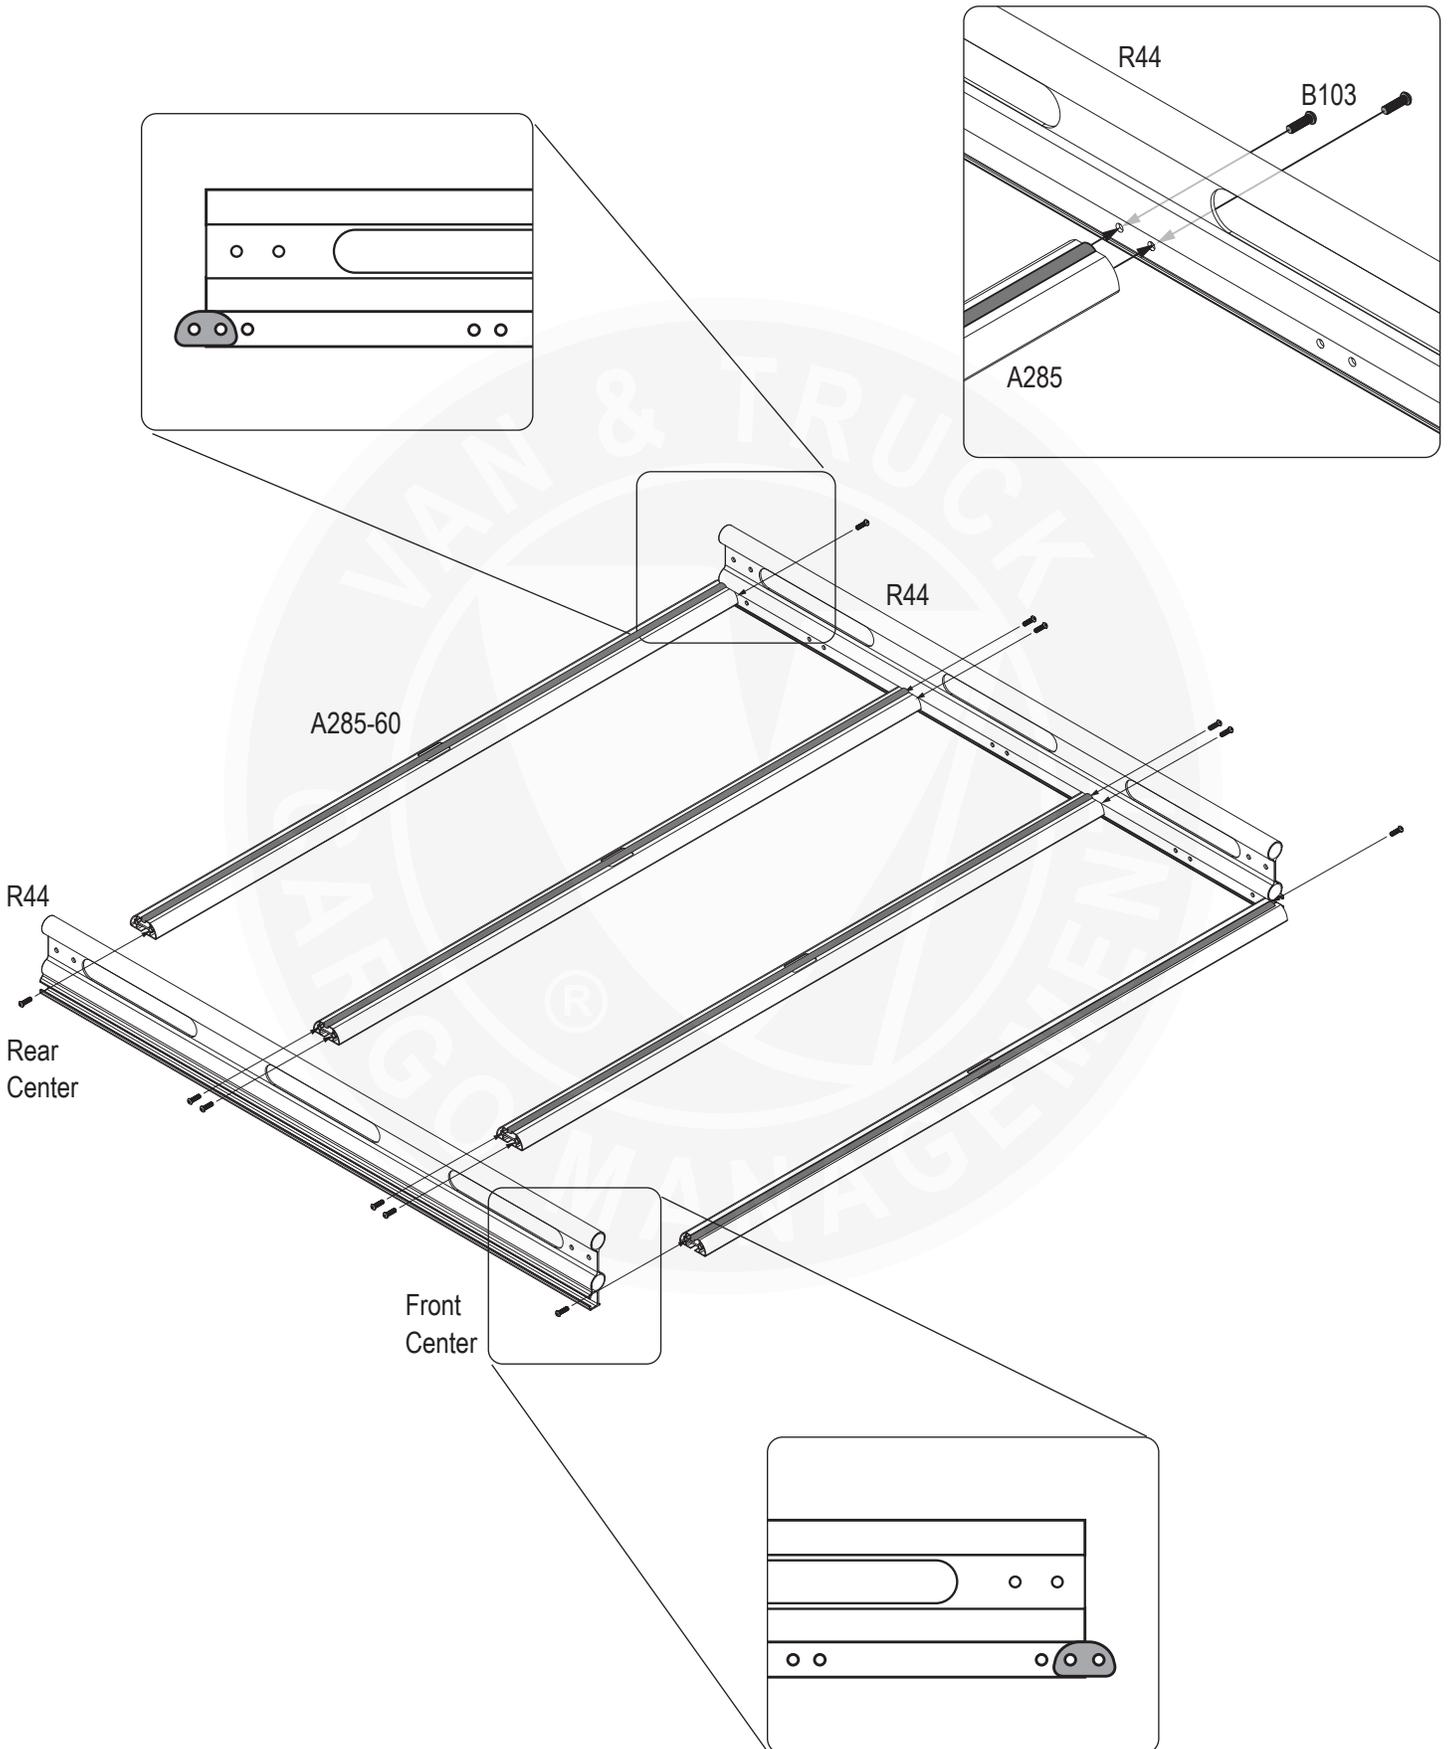




# Section 3

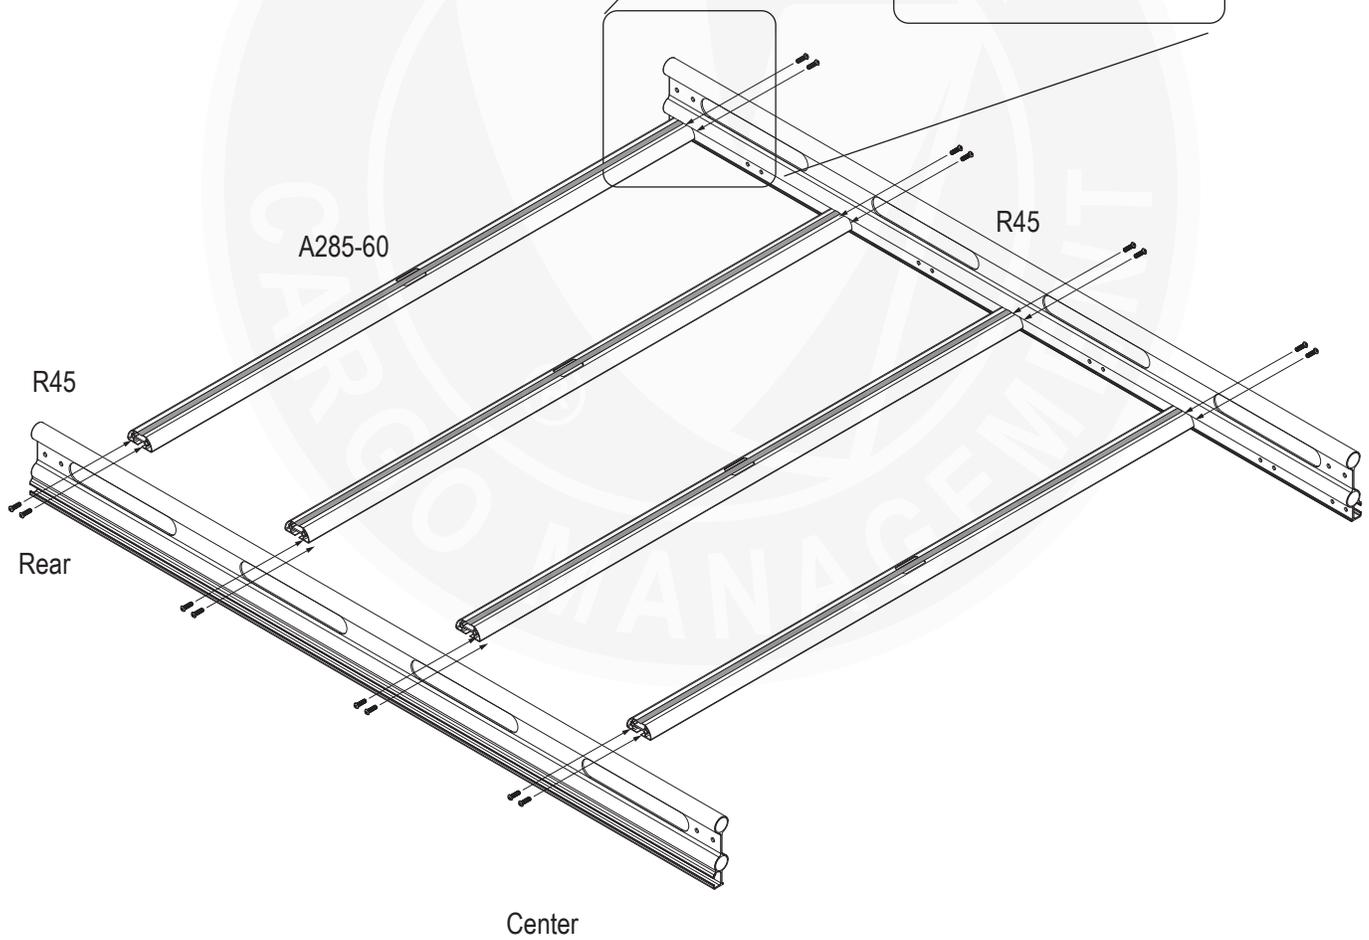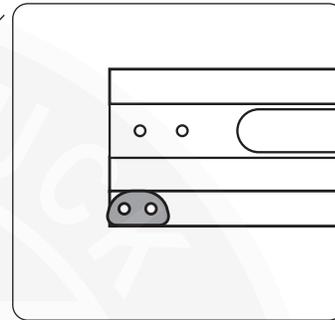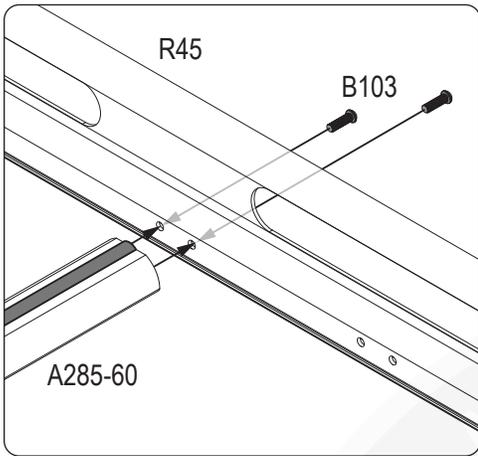




# Section 3


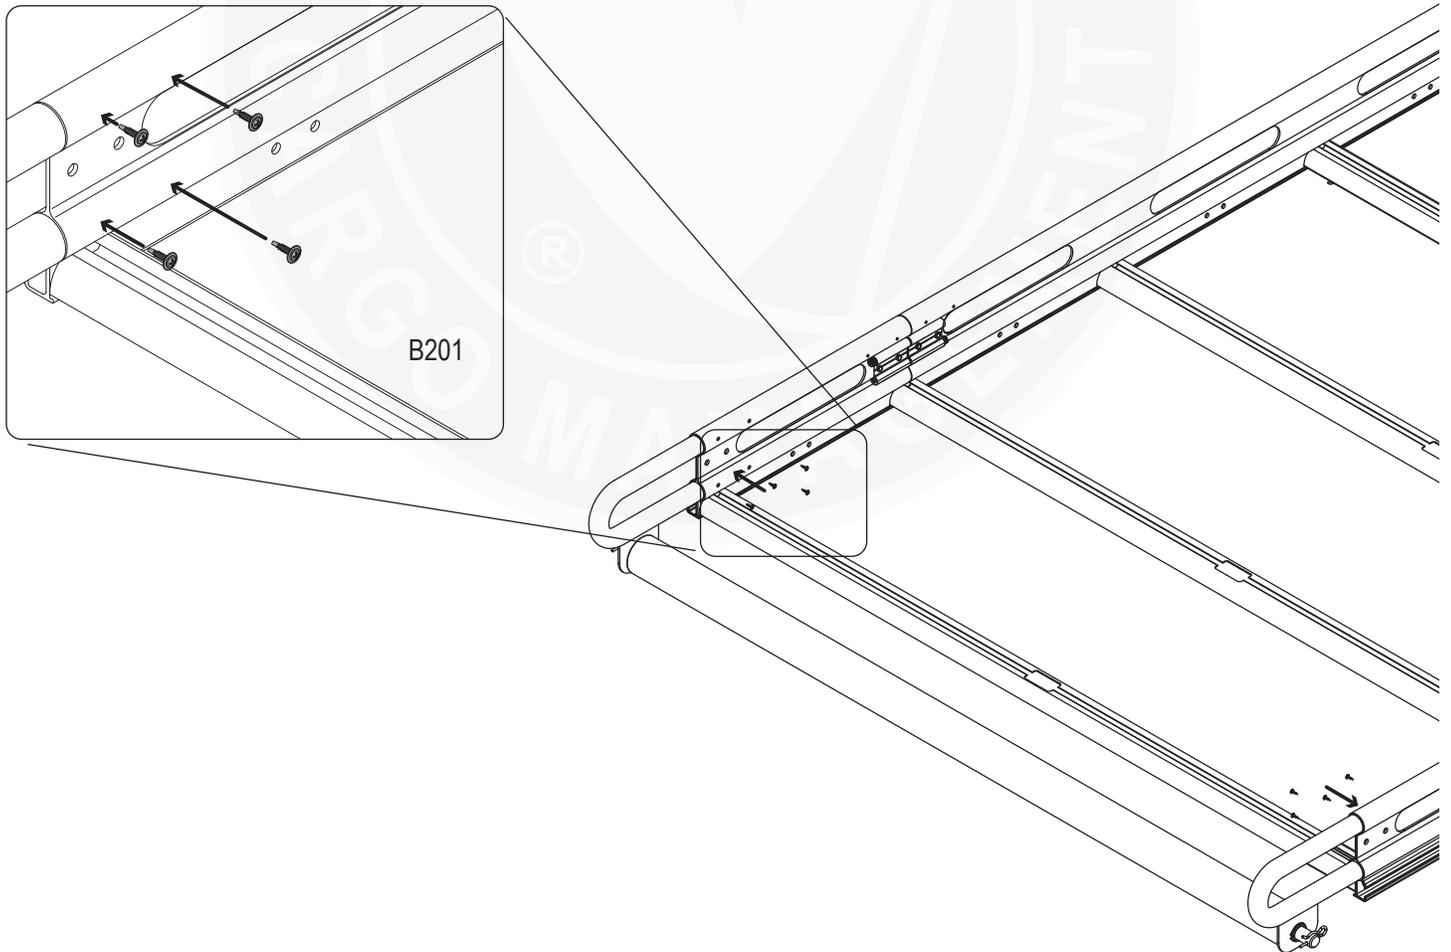
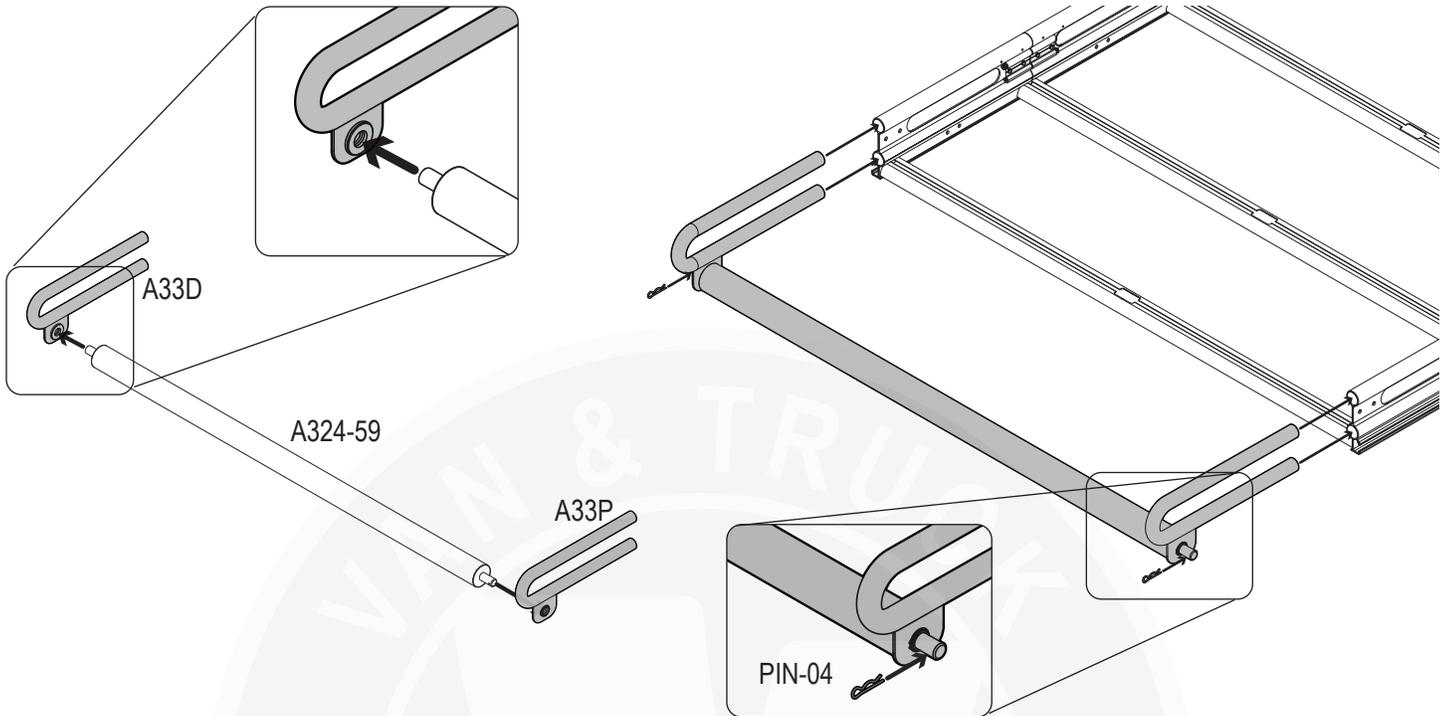


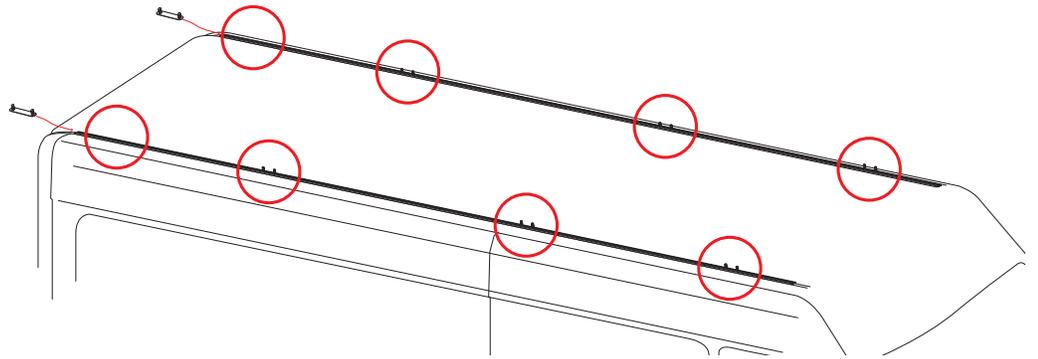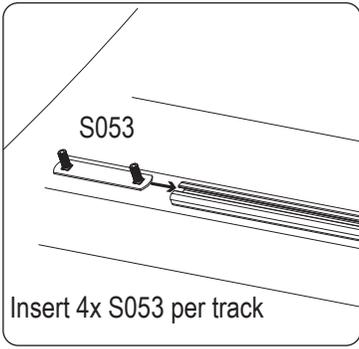




### Section 1




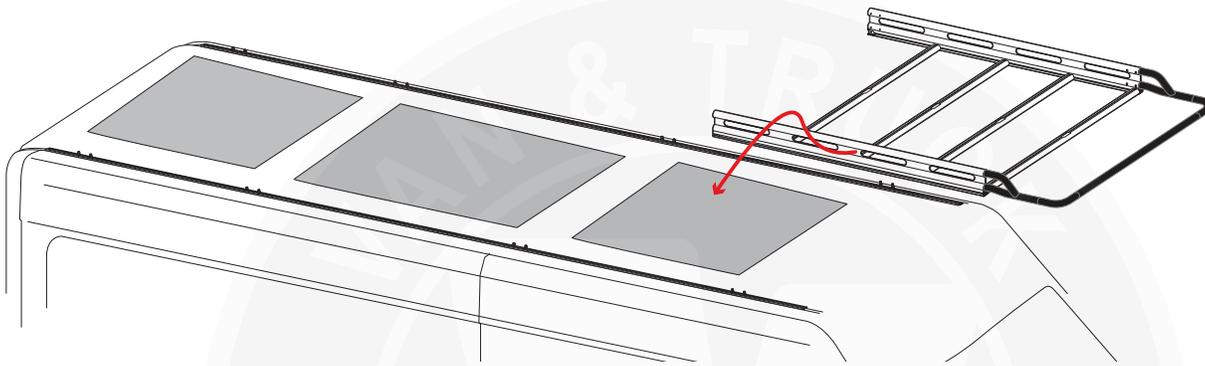



### Section 2

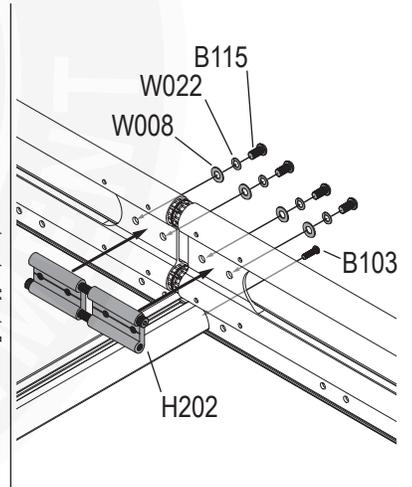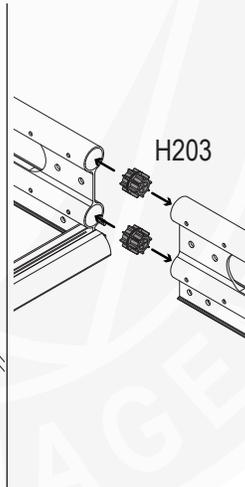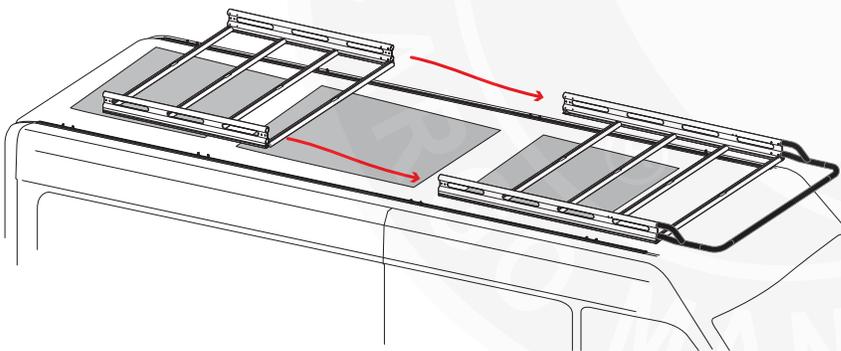


### Section 3

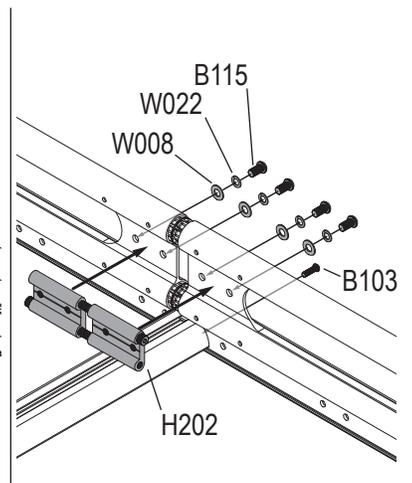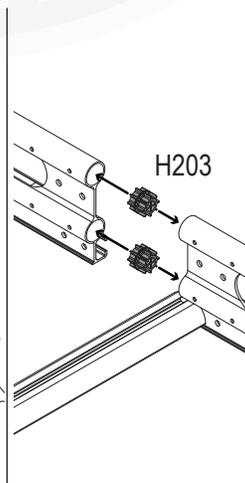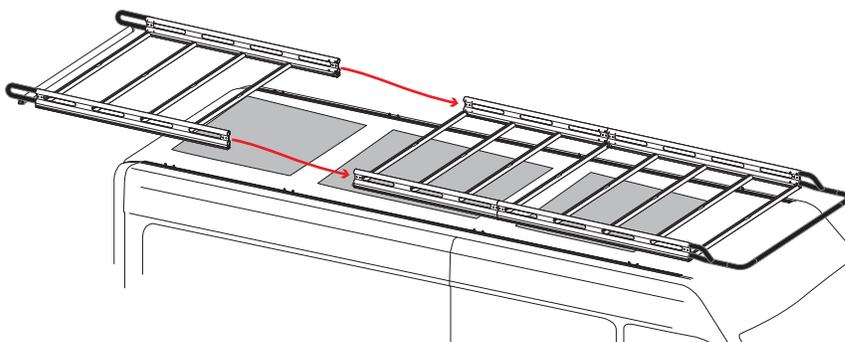

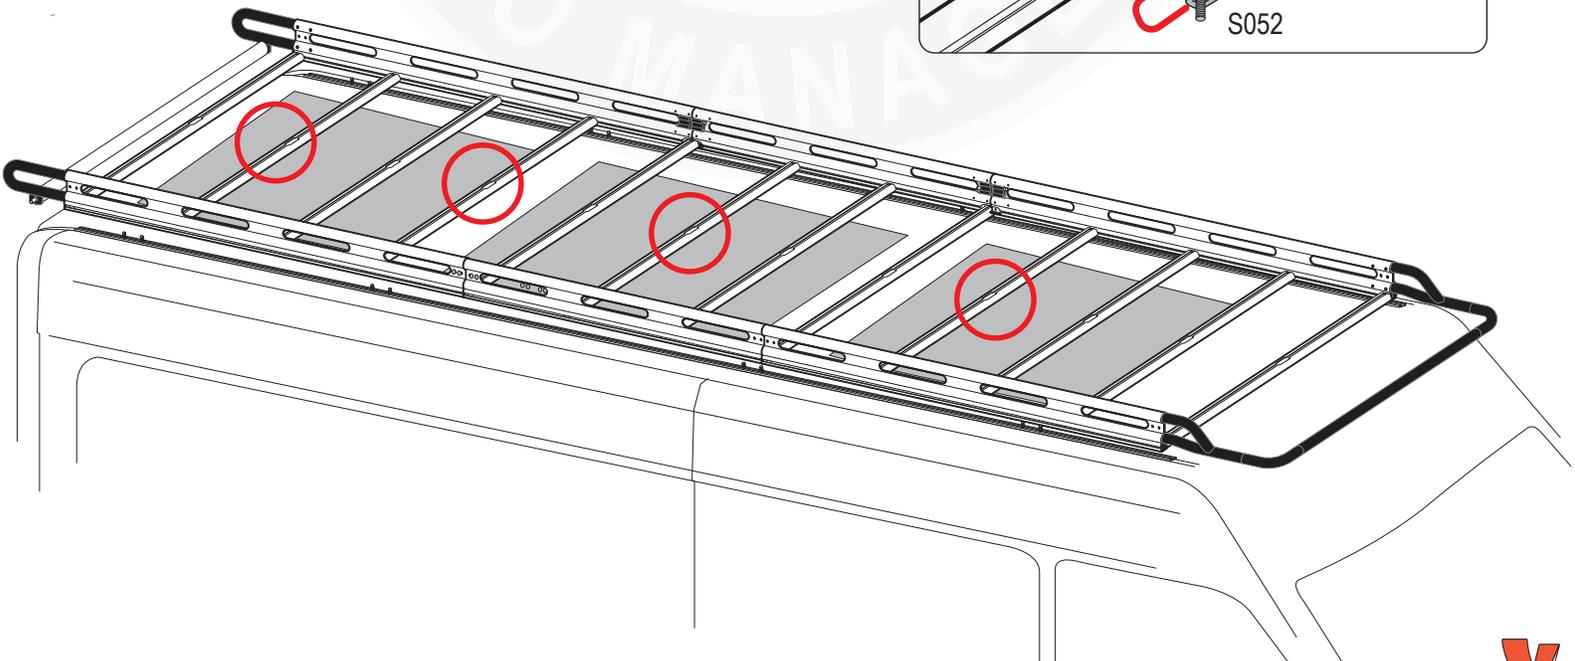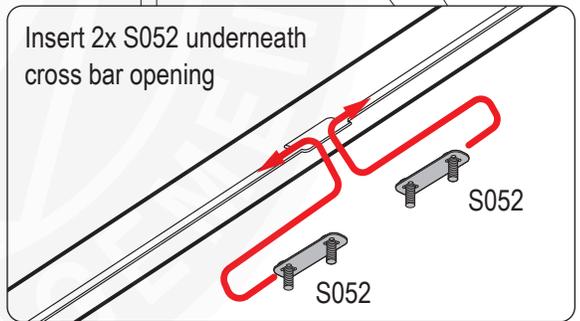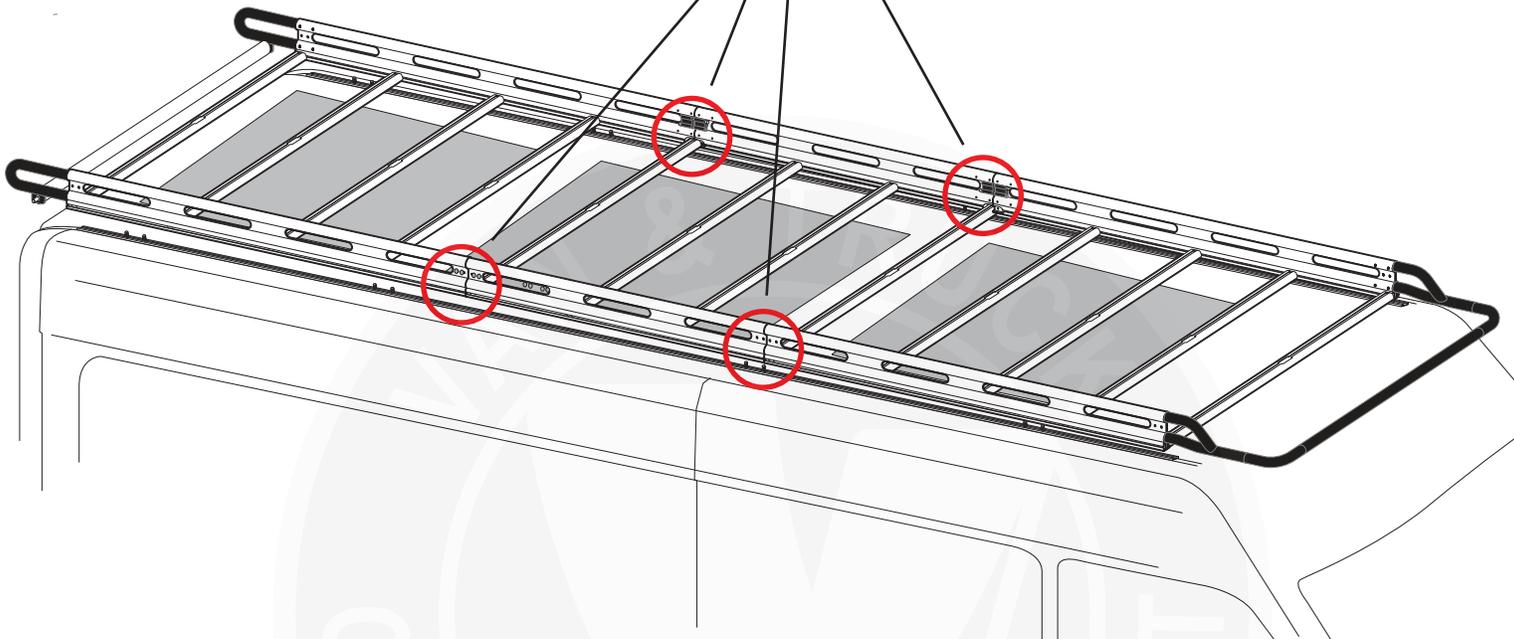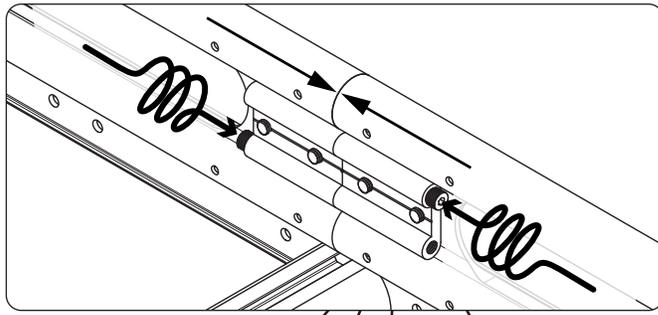

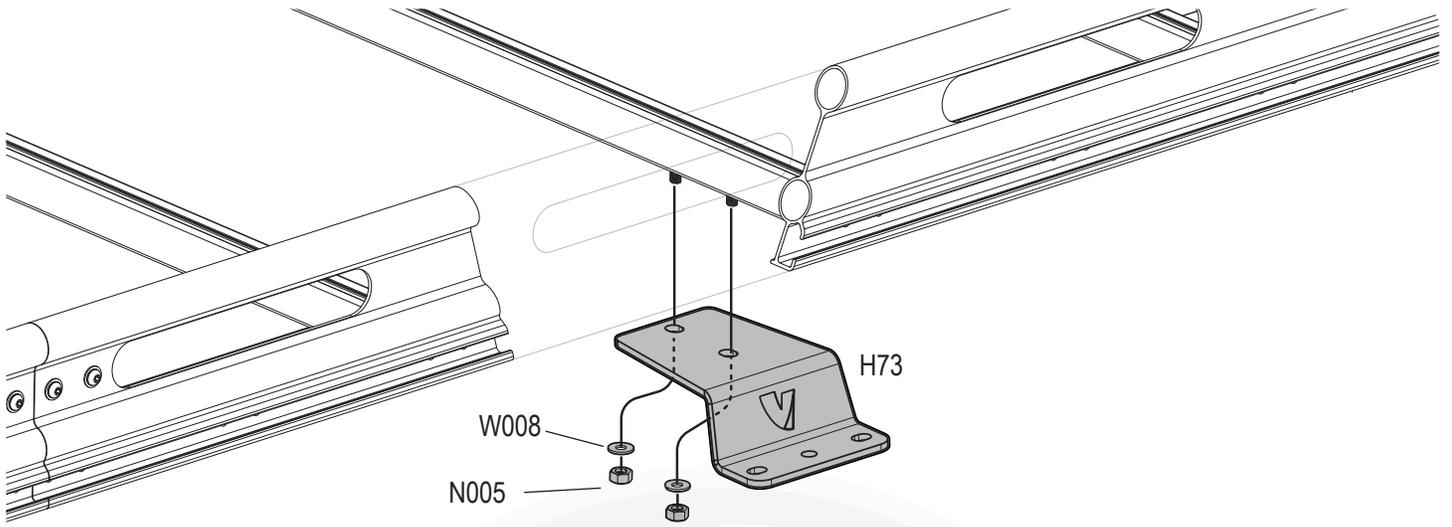

Hand tighten only

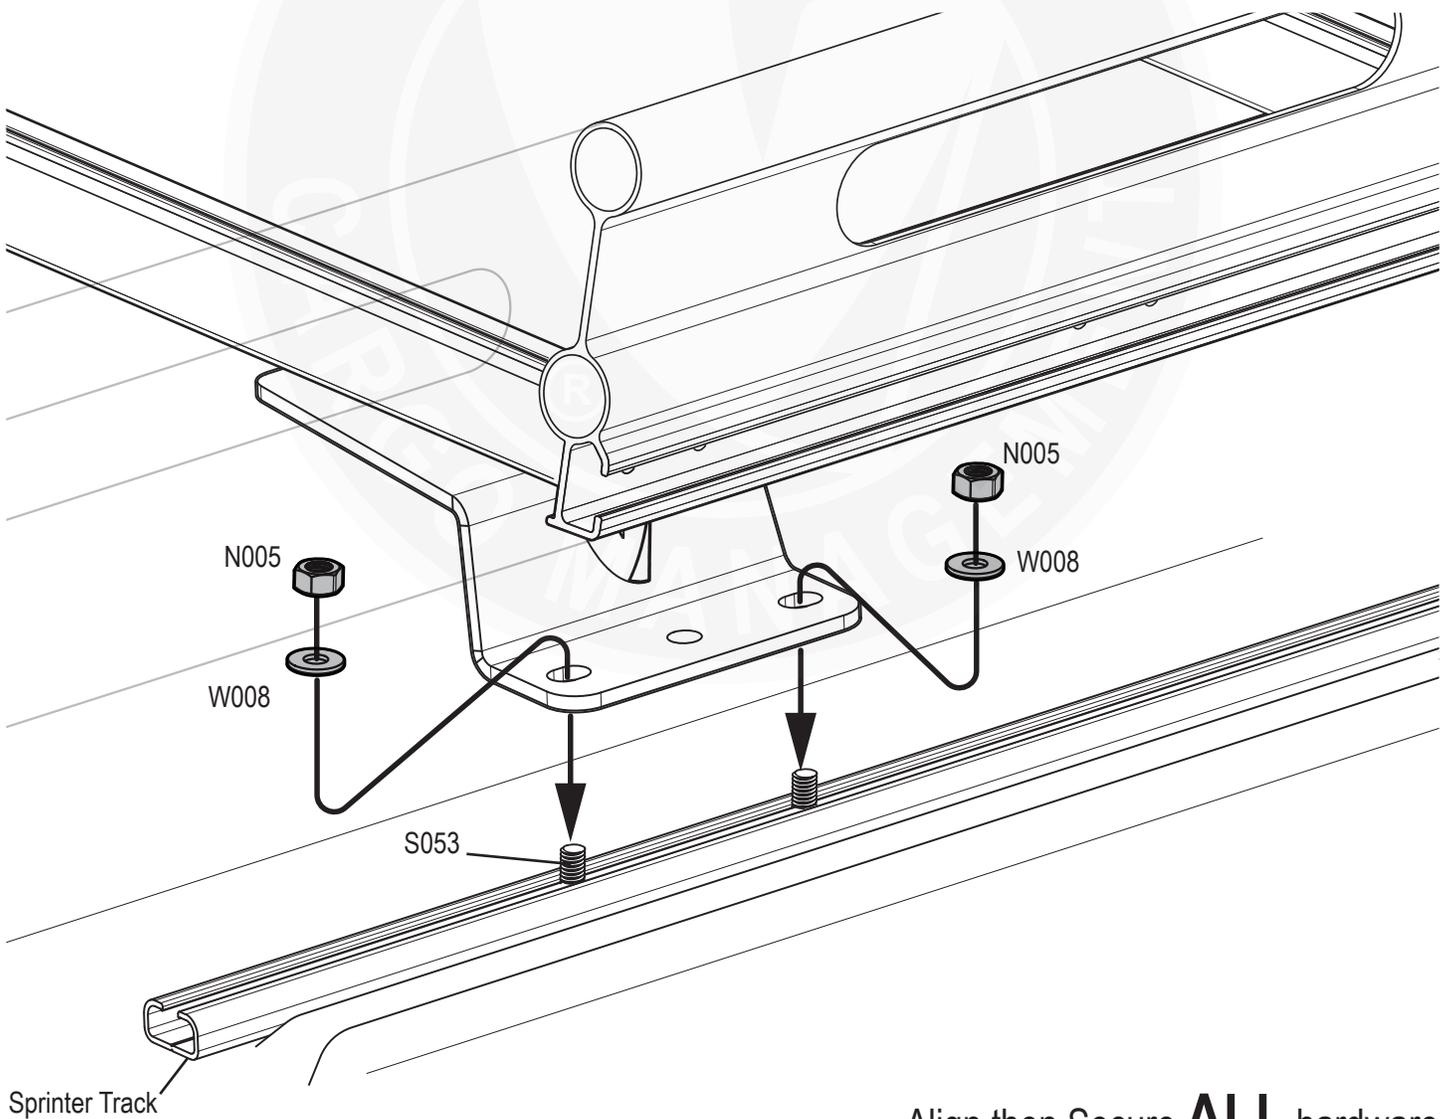

Align then Secure **ALL** hardware

