

Warehouse Use Only

Part #	QUANTITY
A285-60B	6
A324-59S	1

Part #:	H3010EB03B
Weight:	28.97 lbs.

Packer

Initials

Packaging	PD (6")	8x
-----------	---------	----

Invoice #

Box 1	AK/AL
-------	-------

Date / / AM PM


Time :

Ship Weight:	32 lbs.
--------------	---------

Dimensions:	67" x 7" x 6"
-------------	---------------

Pack Time .35

Box 1 of 3 **B**

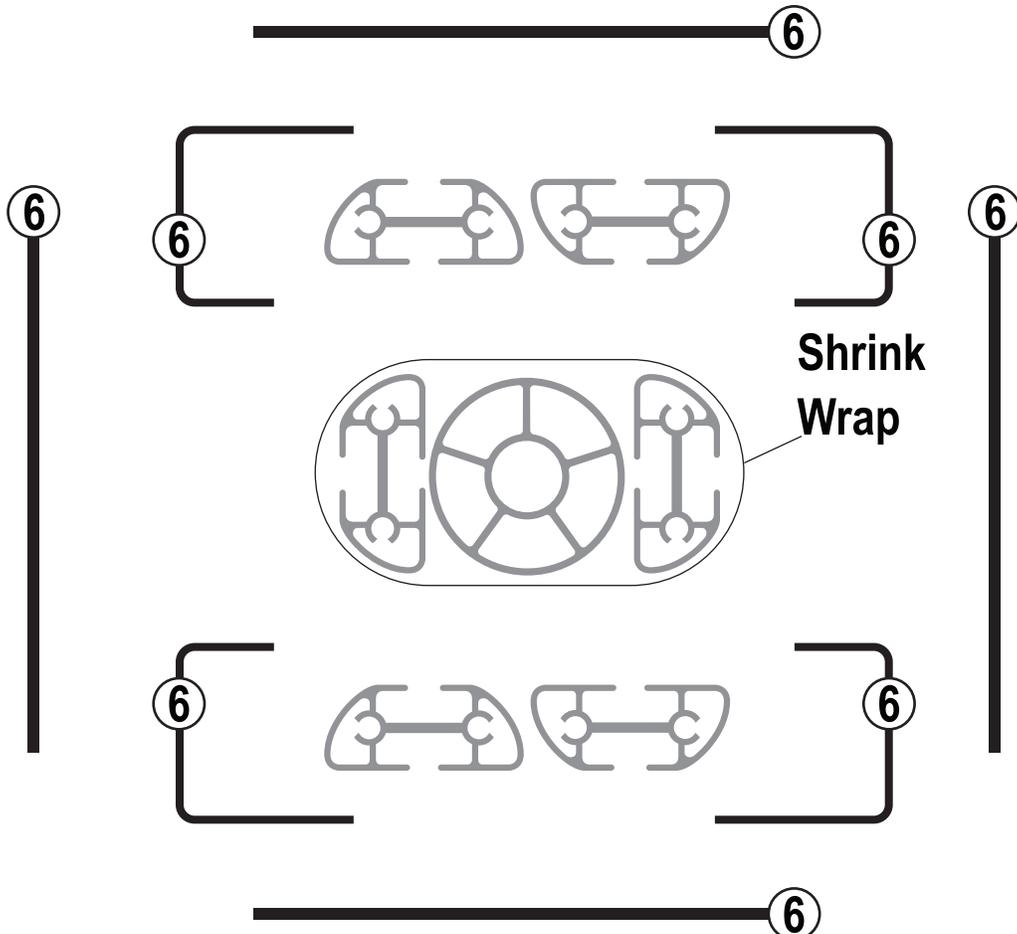

Warehouse Use Only

Part #	QUANTITY
R44B	2
R45B	2
A285-60B	2
A624-49B	1

Part #: H3010EB03B

Weight: 31.39 lbs.

Packaging PD (6") 10x

Packer

Box 1 AK/AL

Invoice #

Ship Weight: 39 lbs.


Date / / AM PM

Dimensions: 67" x 7" x 6"

Time :

Pack Time .35

Box 2 of 3 **B**

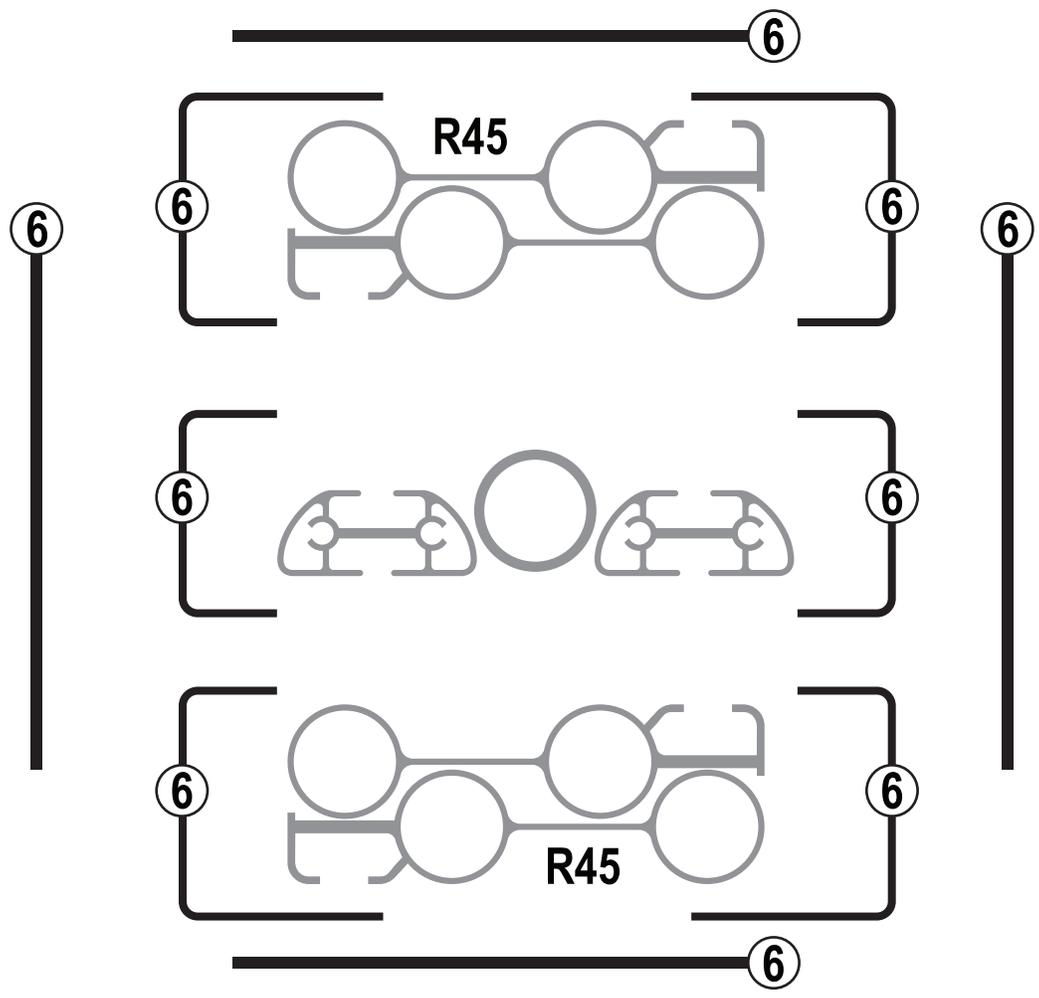

Warehouse Use Only

Part #	QUANTITY
H202	2
H203	4
H73B	6
BG559	10
C06B	2
A620-70B	2
A33D	1
A33P	1
D118	1
D282	1
D243	1
D231	1
D508	1

Part #: H3010EB03B

Weight: 17.11 lbs.

Box 1 BD 1x

Box 2 BH 2x

Ship Weight: 18 lbs.

Dimensions: 18" x 13" x 11"

Box 3 of 3 

Packer

Invoice #

Date / / AM PM


Time :

Pack Time .35




**Van & Truck
Cargo System**

Vantech USA www.vantech.com

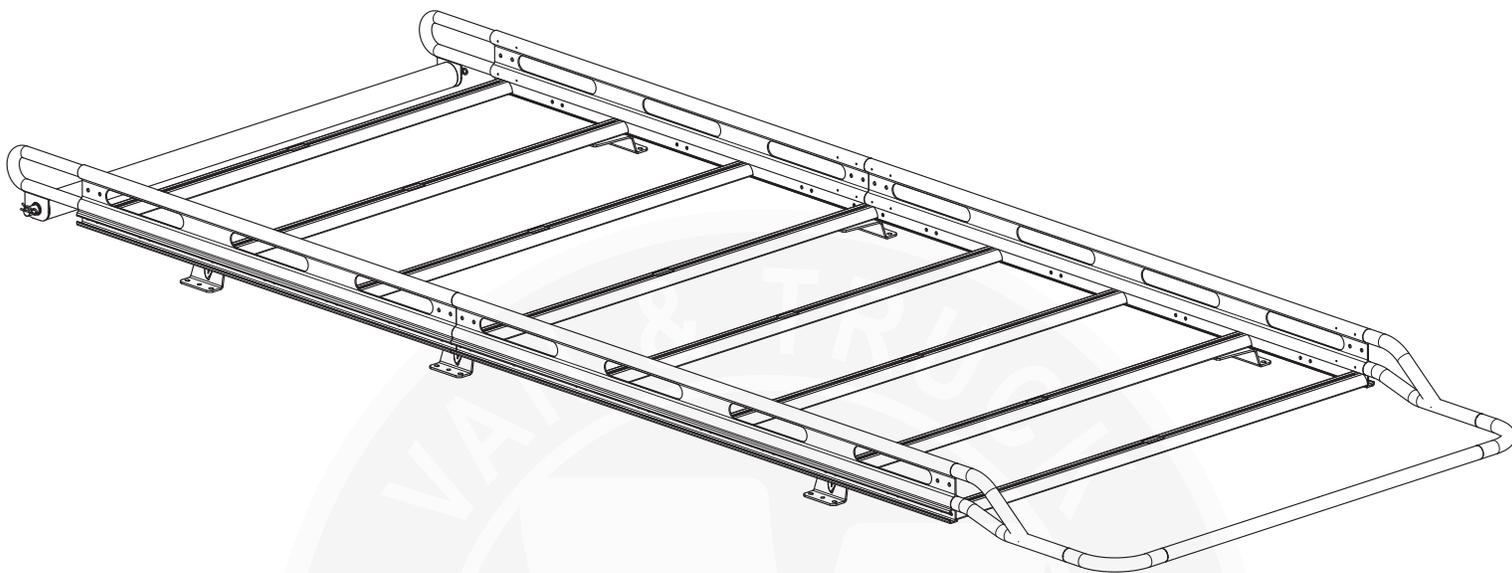

PRODUCT INFO

Part #:	H3010EB03B
System:	H2.1 Series
Material:	Aluminum
Fitment:	Mercedes Benz Sprinter High Roof 07-On 144" WB
Color:	Black
Requirement	Factory/R20/R21 Track (Not Included)

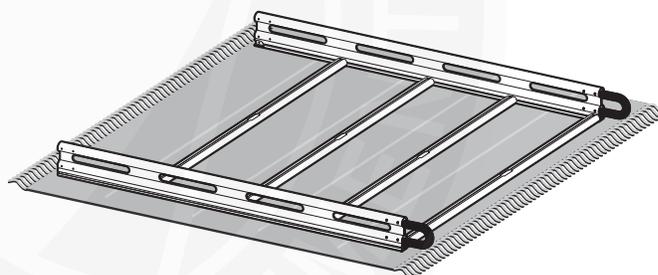


**To prevent damage
install rack over a
carpet or cardboard**

REQUIRED TOOLS

1/2"
Wrench




Power Tool w/
Phillips Head

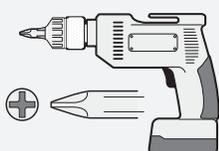

5/32"
Allen Key



3/16"
Allen Key








1/4"
Allen Key





Rubber
Mallet




ITEM	DESCRIPTION	QTY	ITEM	ITEM	DESCRIPTION	QTY	ITEM
S052	5/16" DOUBLE SLIDER (2" BOLT TO BOLT)	6		H73	MOUNTING BASE	6	
S053	5/16" DOUBLE SLIDER (3" BOLT TO BOLT)	6		A285-60	2.25" X 1" X 60" CROSS BAR	8	
W008	5/16" X 3/4" WASHER	32		A324-59	59" ROLLER	1	
W022	5/16" LOCK WASHER	20		R44	CARGO RAIL 47.25"	2	
N002	5/16" NUT	12		R45	CARGO RAIL 63"	2	
N005	5/16" NYLOC NUT	12		H202	H2 CONNECTOR	2	
B103	1/4" X 1" BUTTON HEAD ALLEN BOLT	32		H203	CONNECTOR GUIDE	4	
B115	5/16" X 1.2" BUTTON HEAD ALLEN BOLT	8		A33D	DRIVER SIDE ROLLER U-BRACE	1	
B201	TAP SCREW	24		A33P	PASSENGER SIDE ROLLER U-BRACE	1	
PIN-04	ROLLER PIN	2		A620-70	CANTILEVER (E)	2	
				C06	6" CORNER	2	
				A624-49	49" CONNECTING BAR	1	
				BG559	BAR GUARD	10	


RUBBER BAR GUARD

- Press the rubber bar guard into the channels of cross bars
- The 2 extra bar guards are installed under the first 2 cross bars

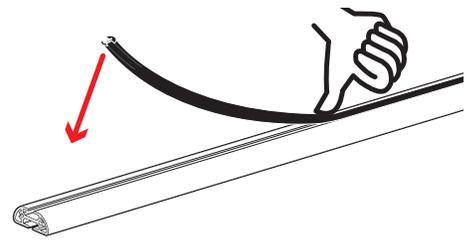
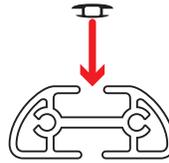


Section 1


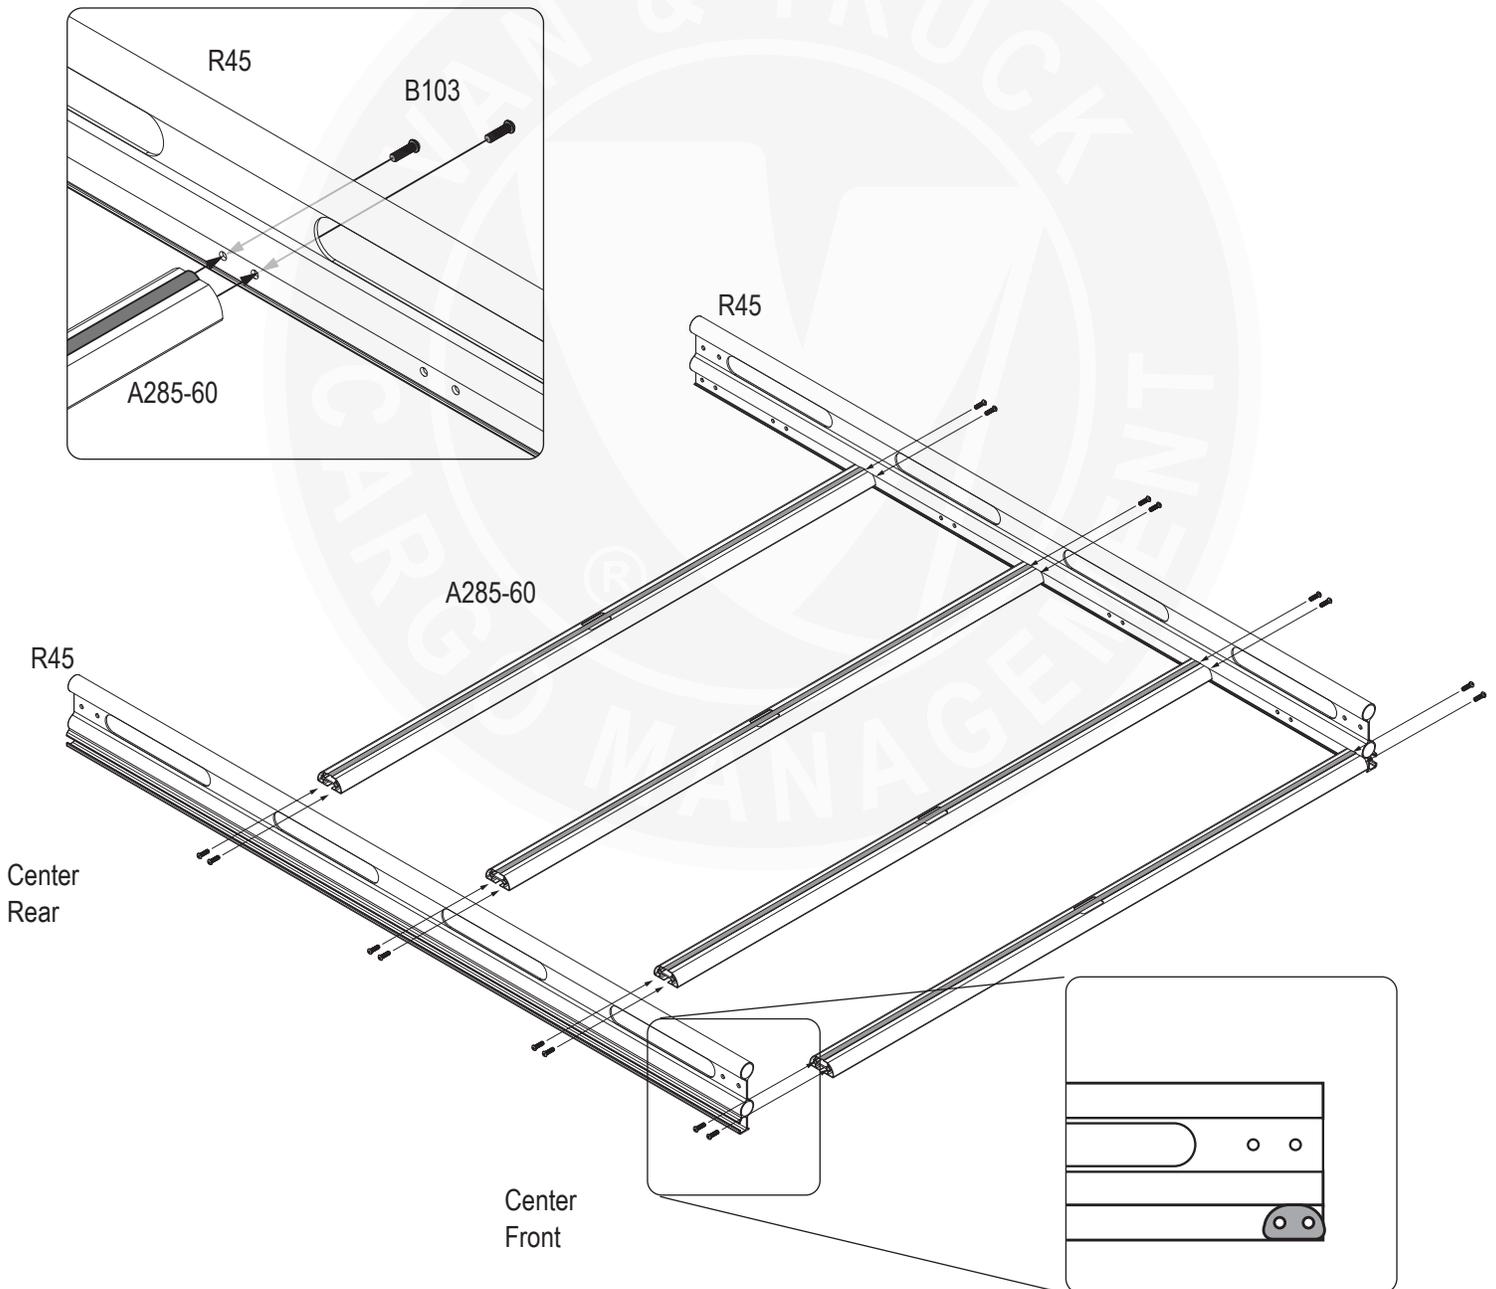




Section 1

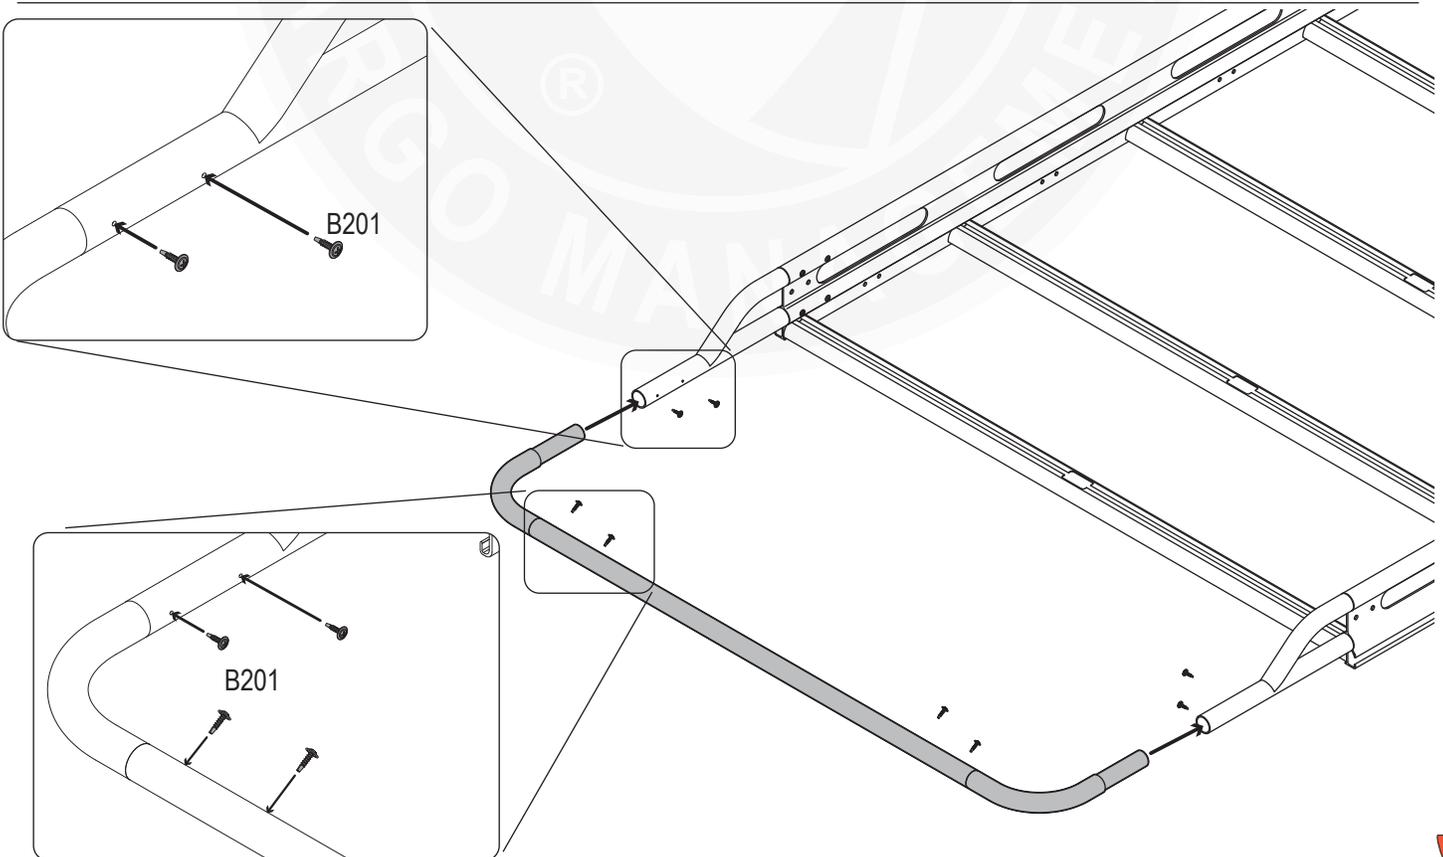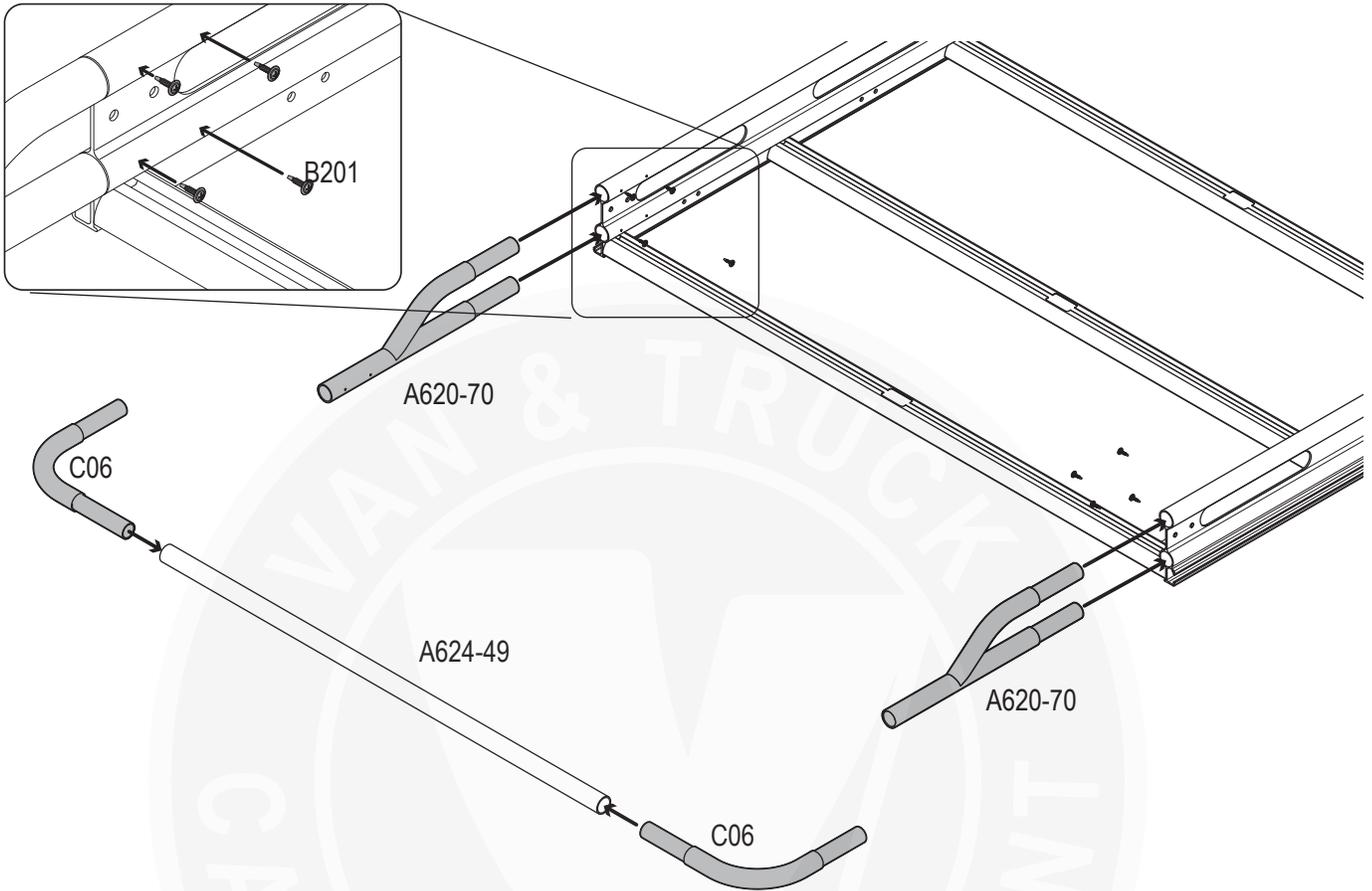

Section 2

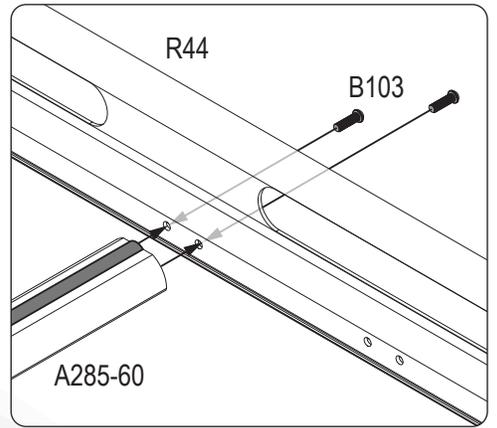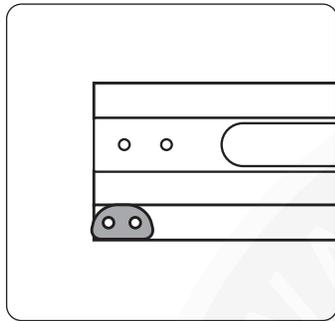

A285-60


R44

R44



Rear



Center
Rear



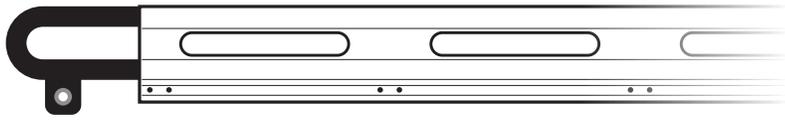


Section 2

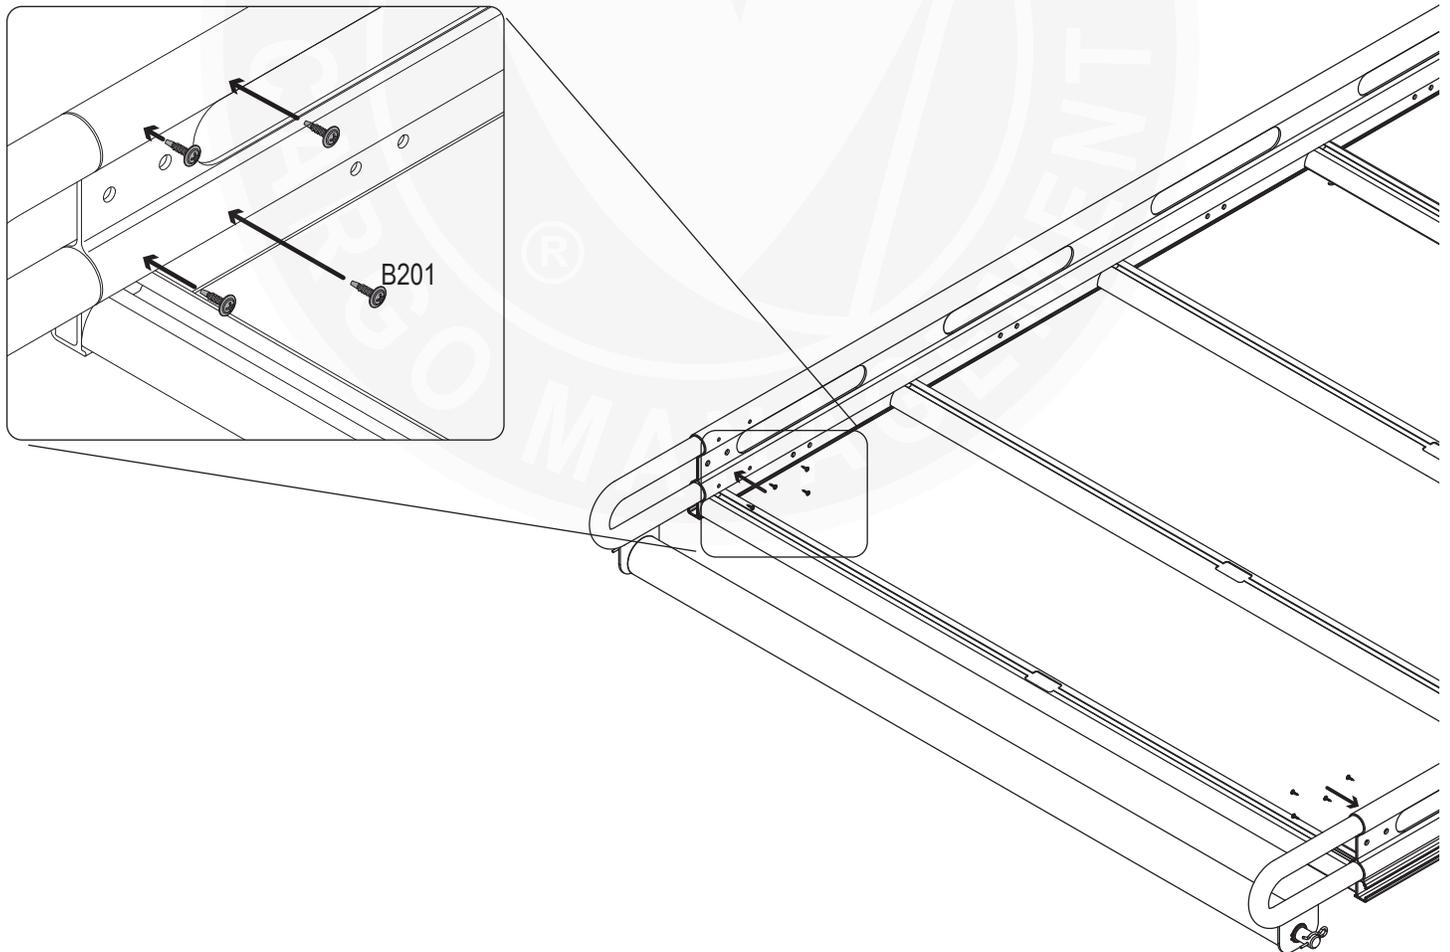
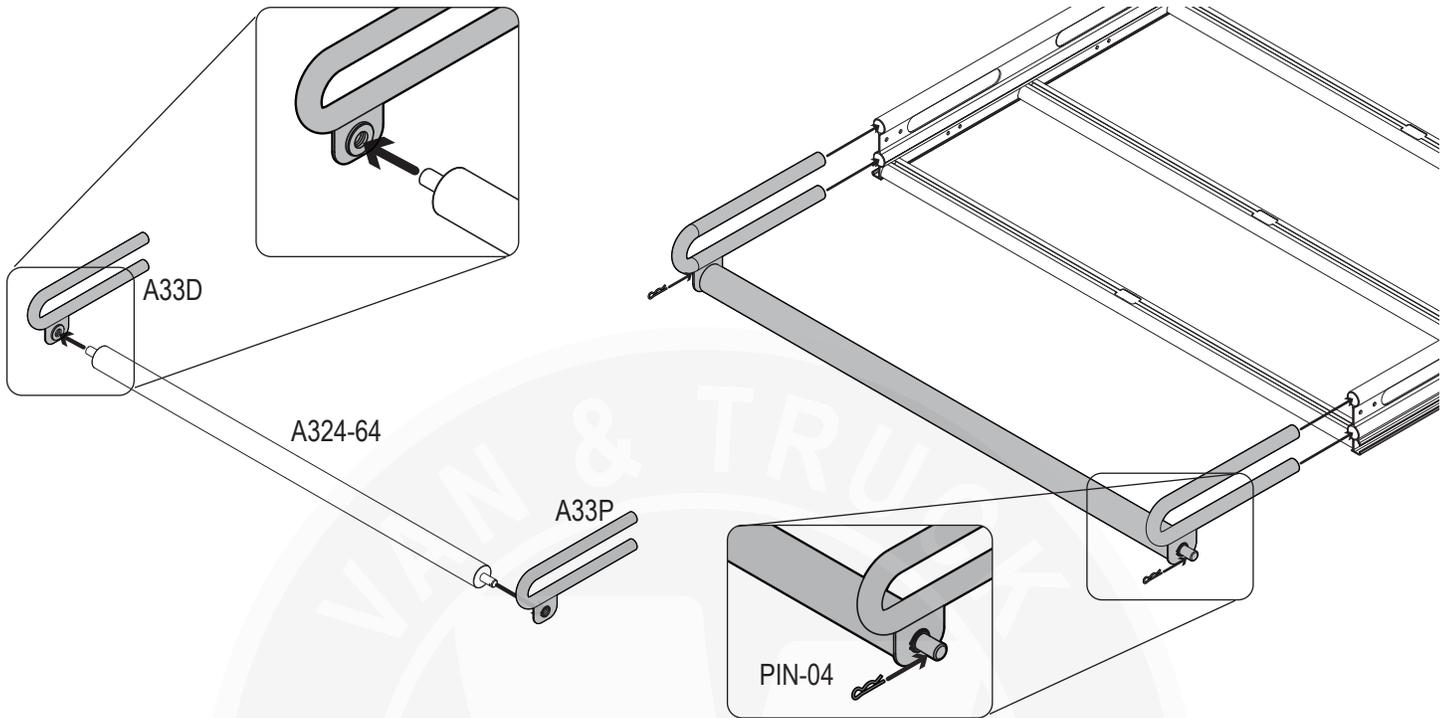


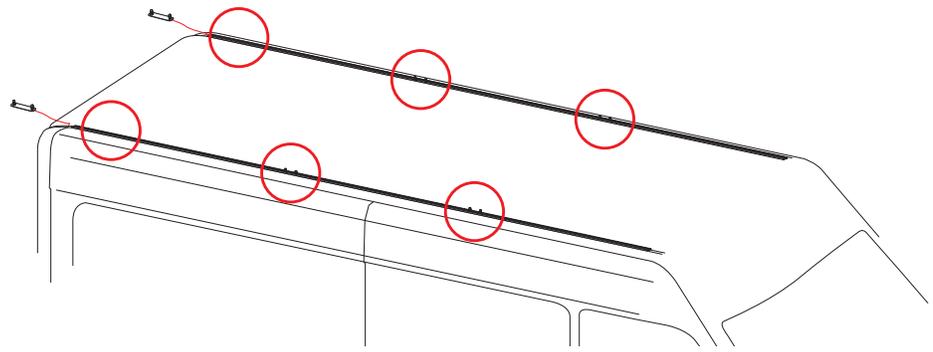
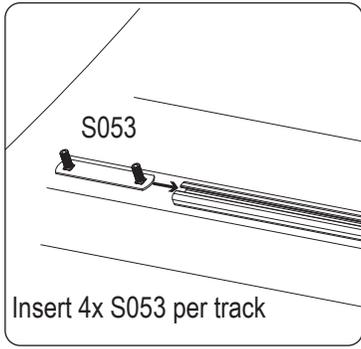


Section 1


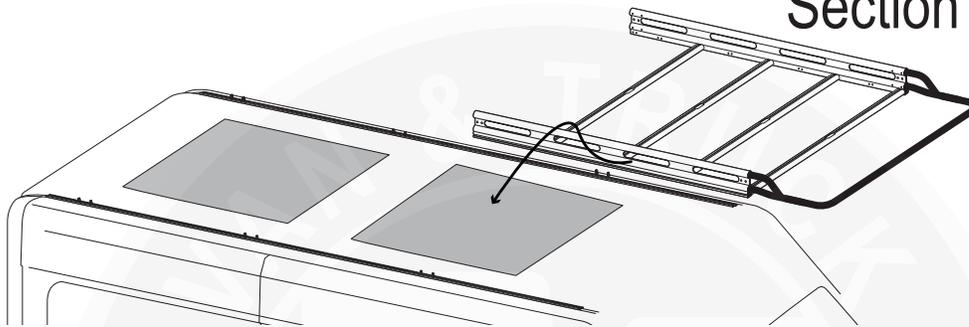



Section 2

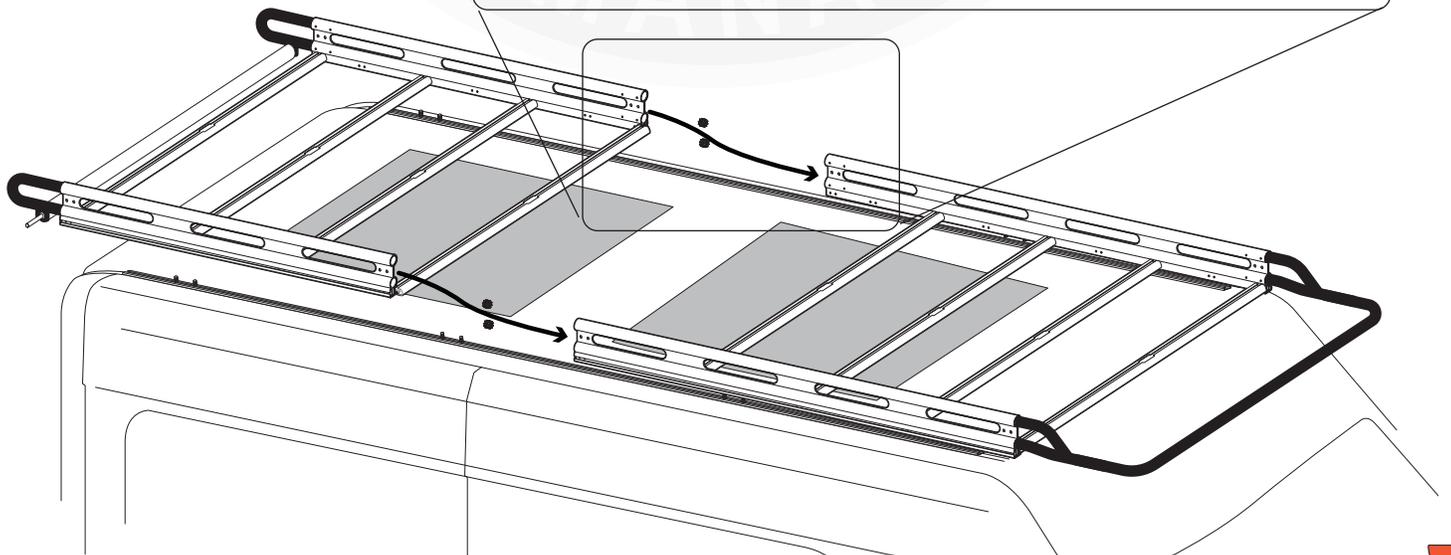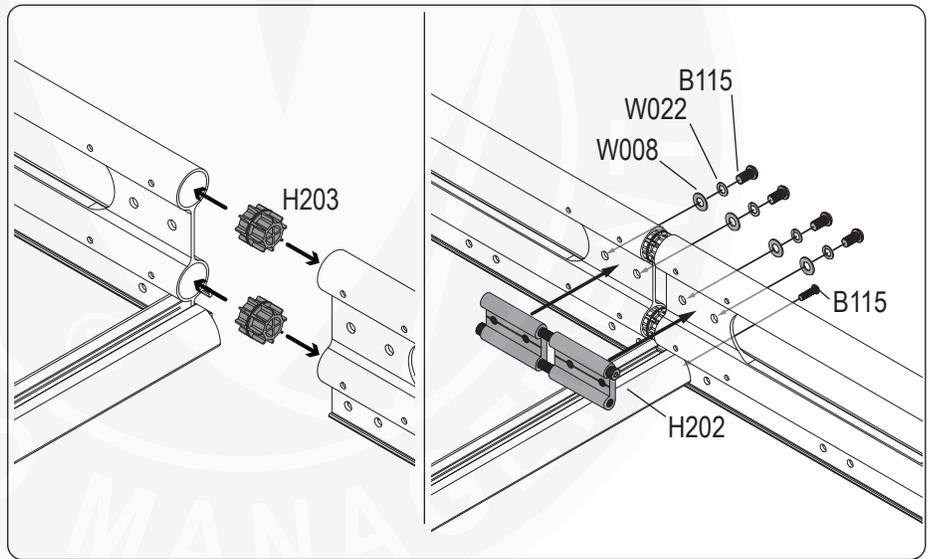

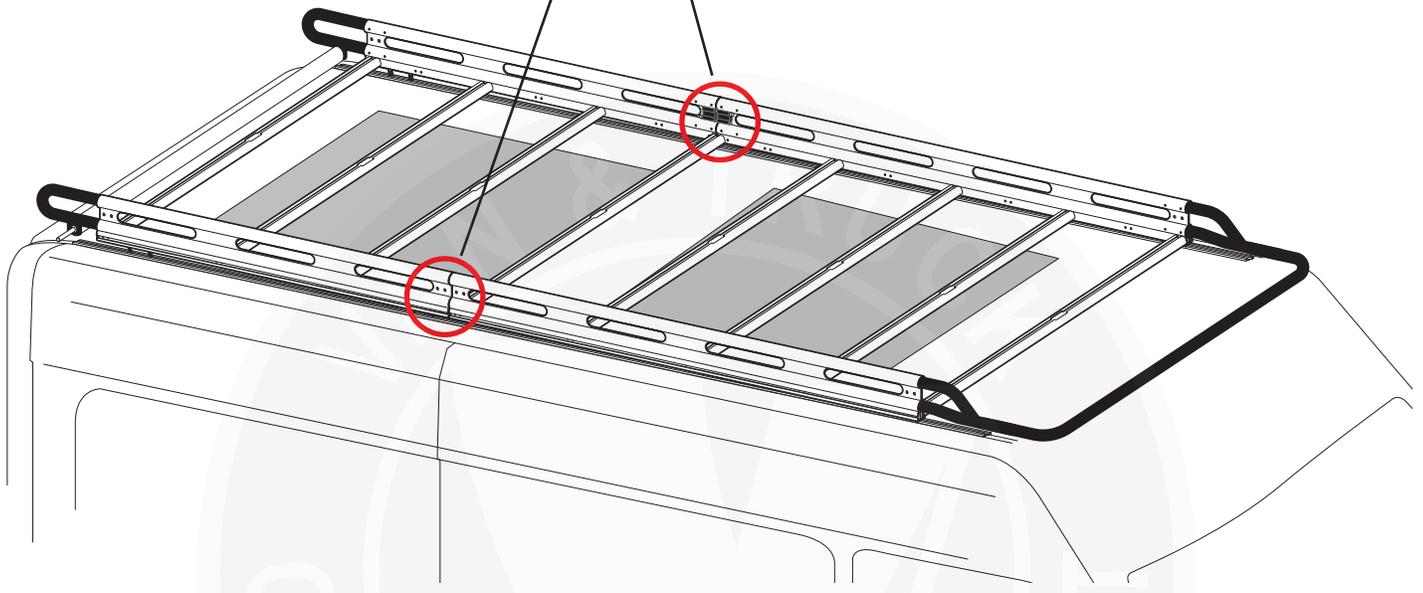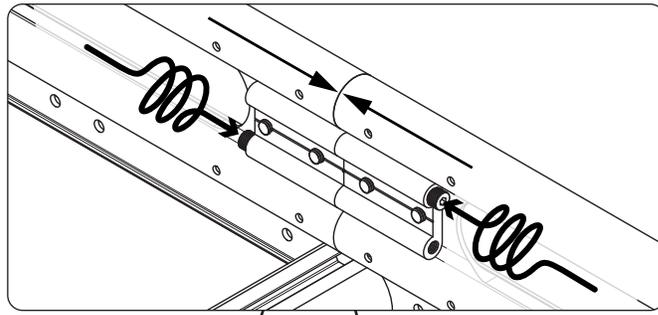


Insert 2x S052 underneath
cross bar opening

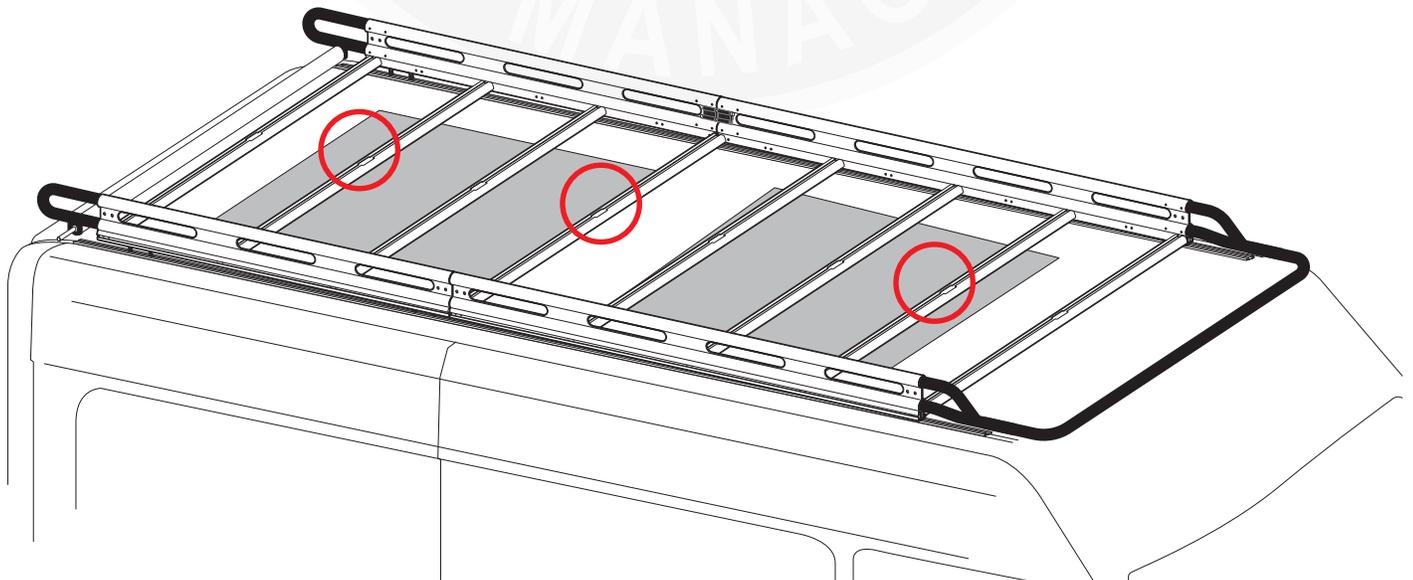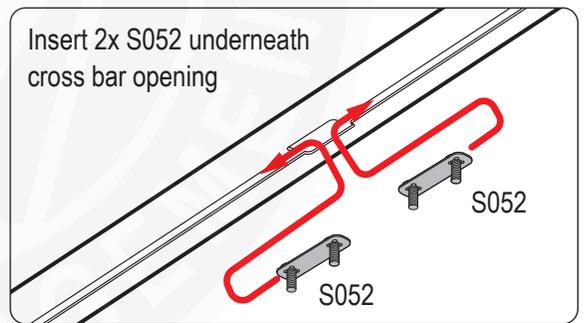

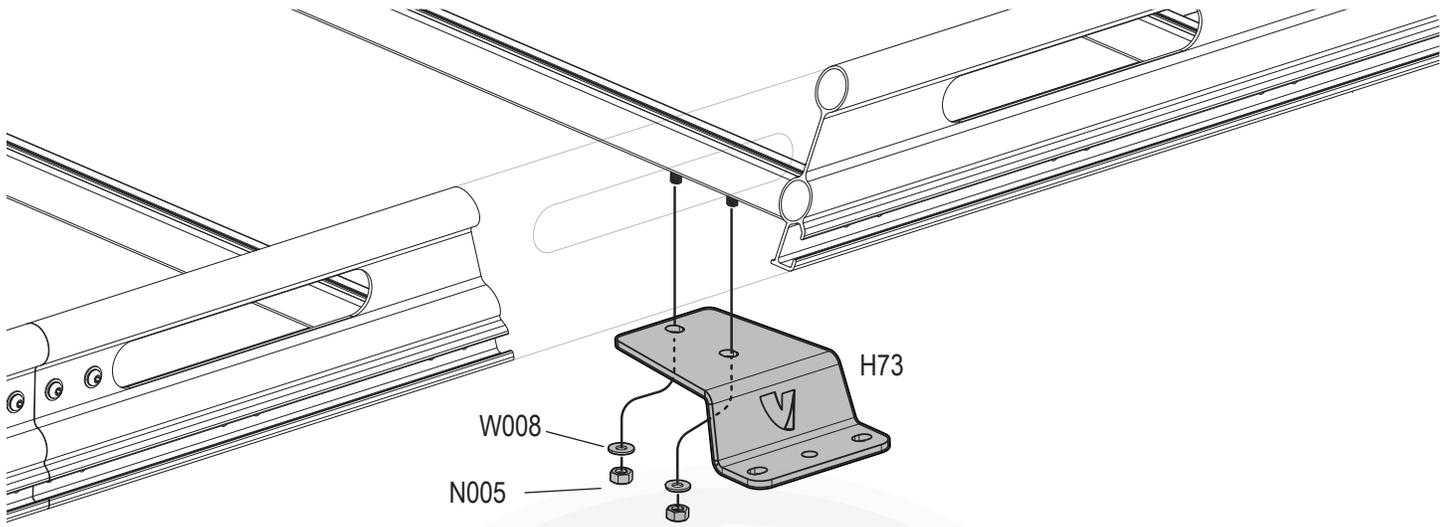

Hand tighten only

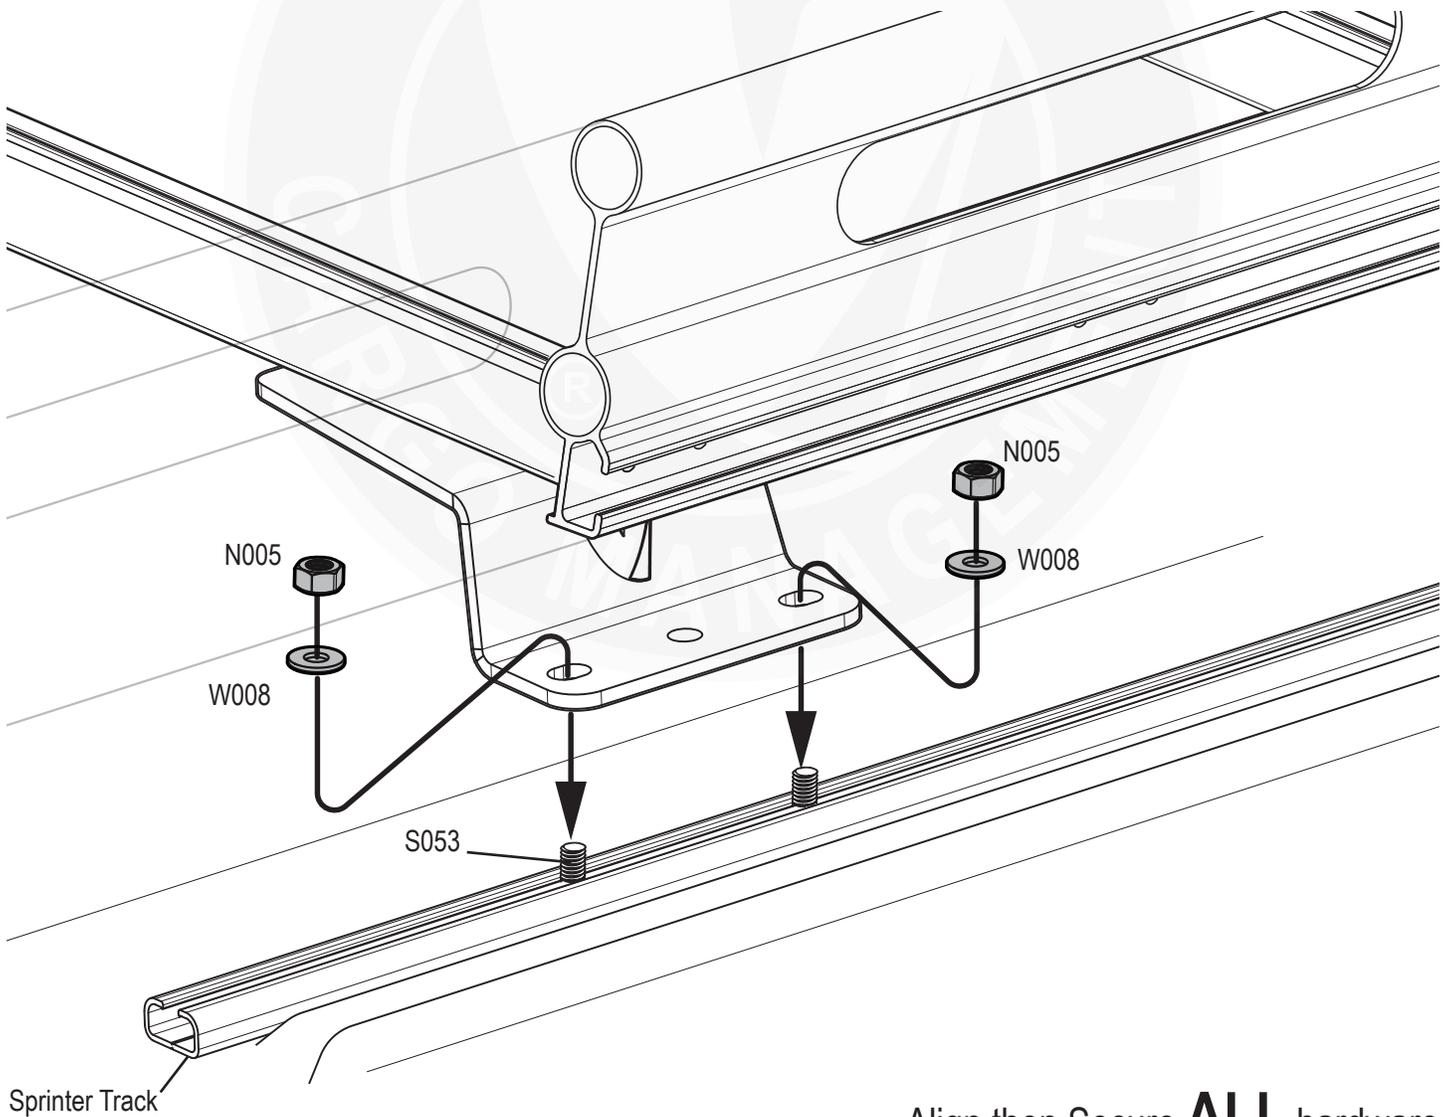

Align then Secure **ALL** hardware

