


Warehouse Use Only

Part #	QUANTITY
D104	1
D541	1
P101/ P102B	1
P103/ P104B	1
R70B	1
R71B	1
A286-65B	2
A20	4

Part #	P3309B
Weight	43.32
Plus/Minus	0.12
Ex Dimensions:	67 x 9 x 8
Box 1	AA/AB

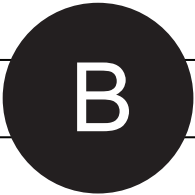



Van & Truck Cargo System

Vantech USA www.vantech.com




PRODUCT INFO


Part #: P3309B
System: P3000
Material: Aluminum
Fitment: Honda Ridgeline 2006-15
Color: Black

REQUIRED TOOLS


9/16" Wrench



3/16" Allen Key Wrench




7/32" Allen Key Wrench




Marker




PART #	DESCRIPTION	QTY	ITEM ITEM NOT TO SCALE	PART #	DESCRIPTION	QTY	ITEM ITEM NOT TO SCALE
S101	3/8" X 1" SINGLE SLIDER	4		P101	DRIVERSIDE FRONT UPRIGHT	1	
S103	3/8" X 3/4" DOUBLE SLIDER (3" BOLT TO BOLT)	4		P102	PASSENGER FRONT UPRIGHT	1	
S111	3/8" X 3/4" SINGLE SLIDER	8		P103	DRIVERSIDE REAR UPRIGHT	1	
S113	3/8" X 1 1/4" SINGLE SLIDER	4		P104	PASSENGER REAR UPRIGHT	1	
W008	5/16" X 3/4" WASHER	1 TOOL (OPTIONAL)		R70	ADAPTOR PLATE DRIVER SIDE	1	
W013	3/8" X 3/4" WASHER	20		R71	ADAPTOR PLATE PASSENGER SIDE	1	
W023	3/8" LOCK WASHER	16		P013	ANGLED BRACE	4	
N003	3/8" NUT	16		A286-65	3" X 1.5" X 65" CROSS BAR	2	
N012	5/16" PLUS NUT	2 (OPTIONAL)		A286-C	END CAP (PL)	4	
N018	5/16" 3/8" KNOB	4		A20	ADJUSTABLE GUIDE	4	
N020	5/16" PLUS NUT (TOOL)	1 (OPTIONAL)					
N013	5/16" CAGE NUT	12 (+2 SPARE)					
B068	5/16" X 1 3/4" HEX BOLT	1 (TOOL)					
B166	5/16" X 1" COUNTERSUNK BOLT	22					
B503	1/4" X 1/2" CYLINDER HEAD ALLEN BOLT	2					

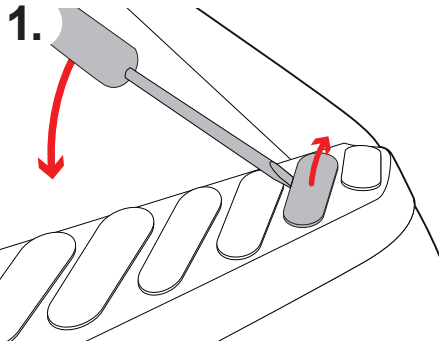

1. Use a flat head screw driver and pop open the 2nd ridge from the rear.

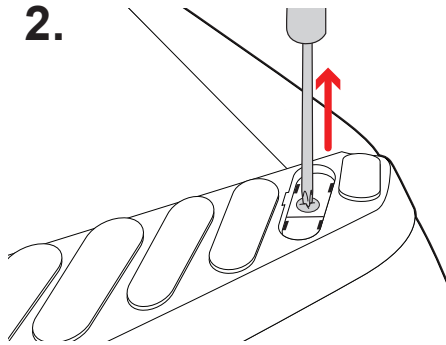









2. Using a phillips head screw drive unscrew the factory bolt.

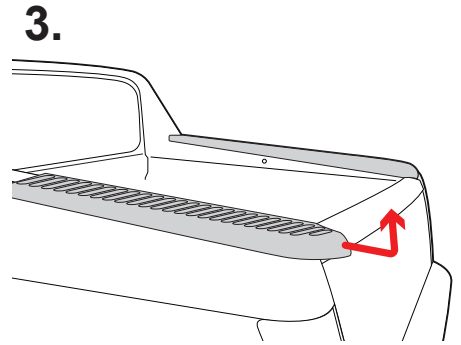


3. Pull the back the plastic bed rail 1" and then pull up gently to removed from vehicle.

Optional Plus Nut Installation (Drilling Required)


For additional strength you may use the optional anchor kit. Instructions are as follows.

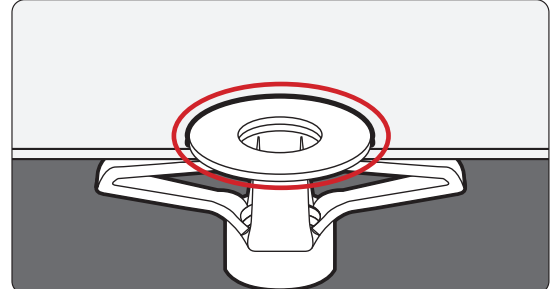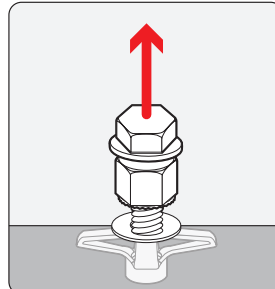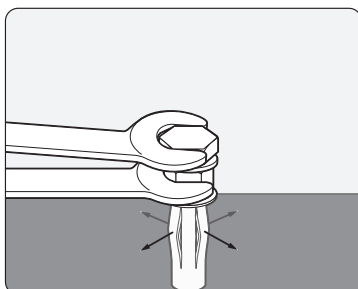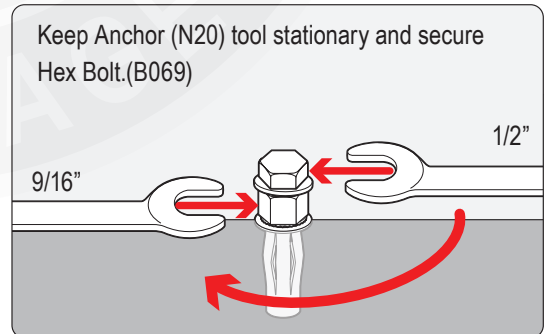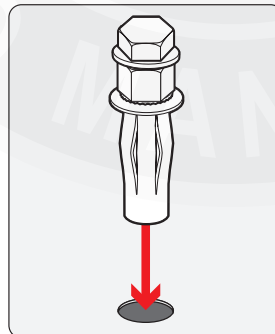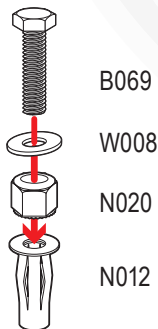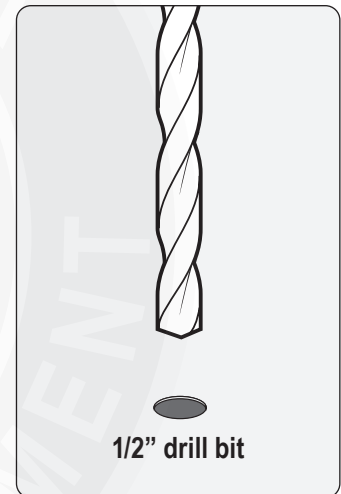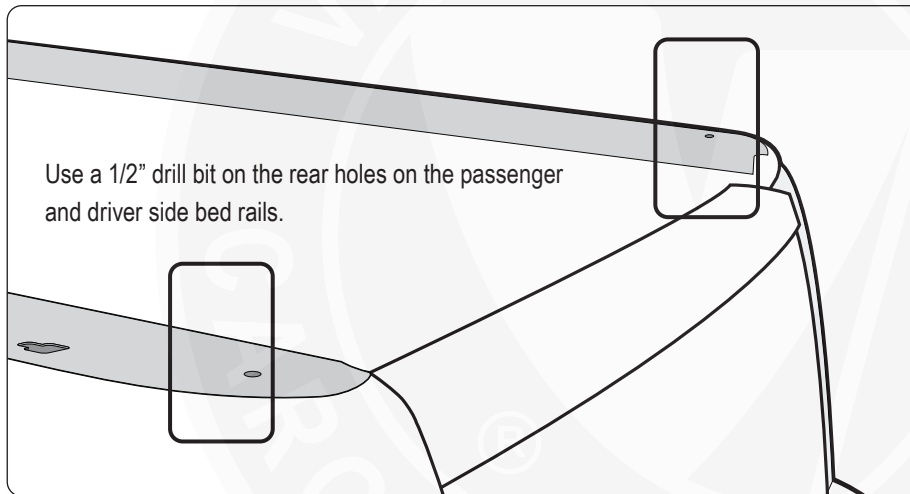


- 4.** Slide the cage nuts into the following locations. Repeat on passenger side.

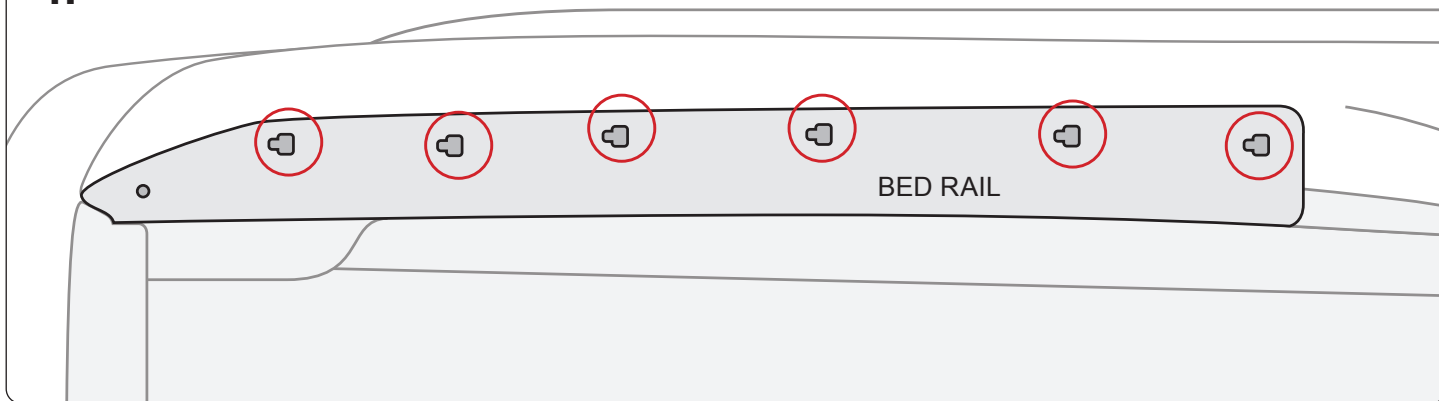


- 5.** To minimize risk of losing a cage nut, screw in a 5/16" bolt for easier handling.

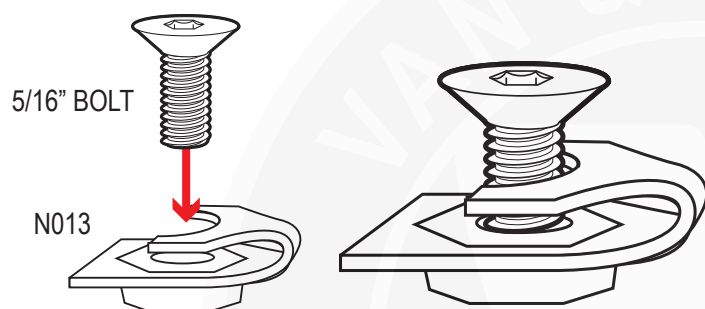

- 6.**

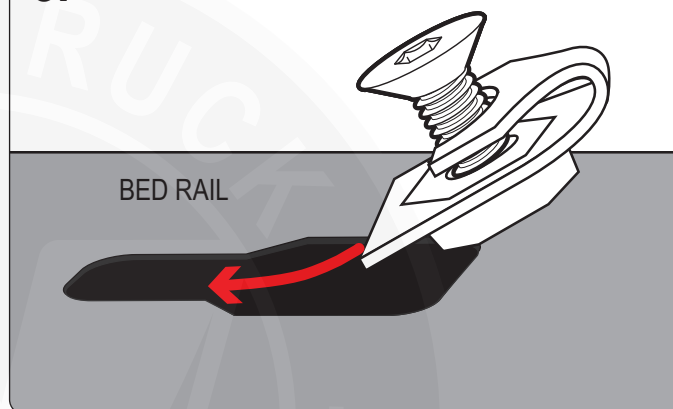


- 7.** Remove the bolt when cage nut is fitted in bed rail.



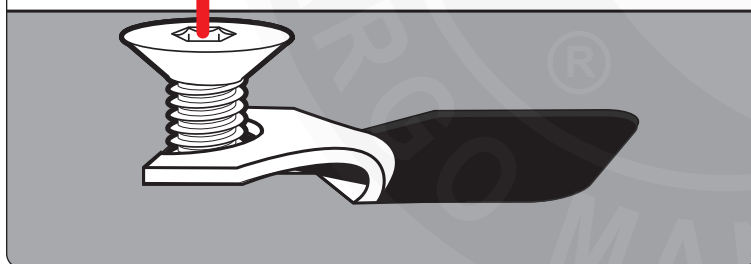


- 8.** Repeat for all 12 slots




- 9.**

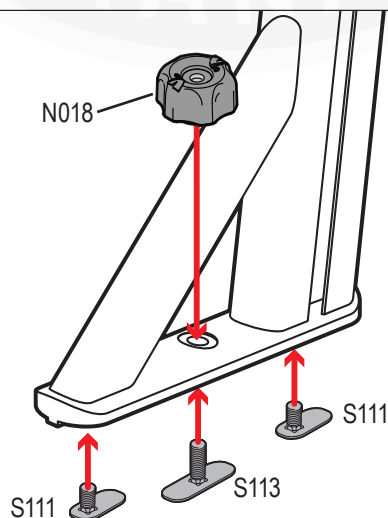

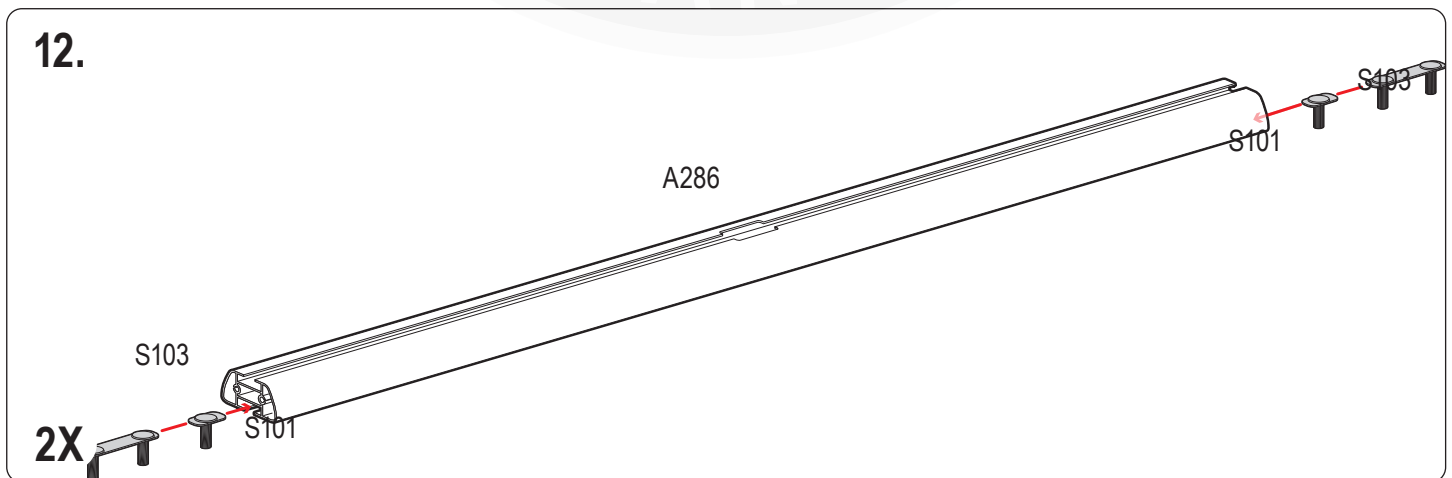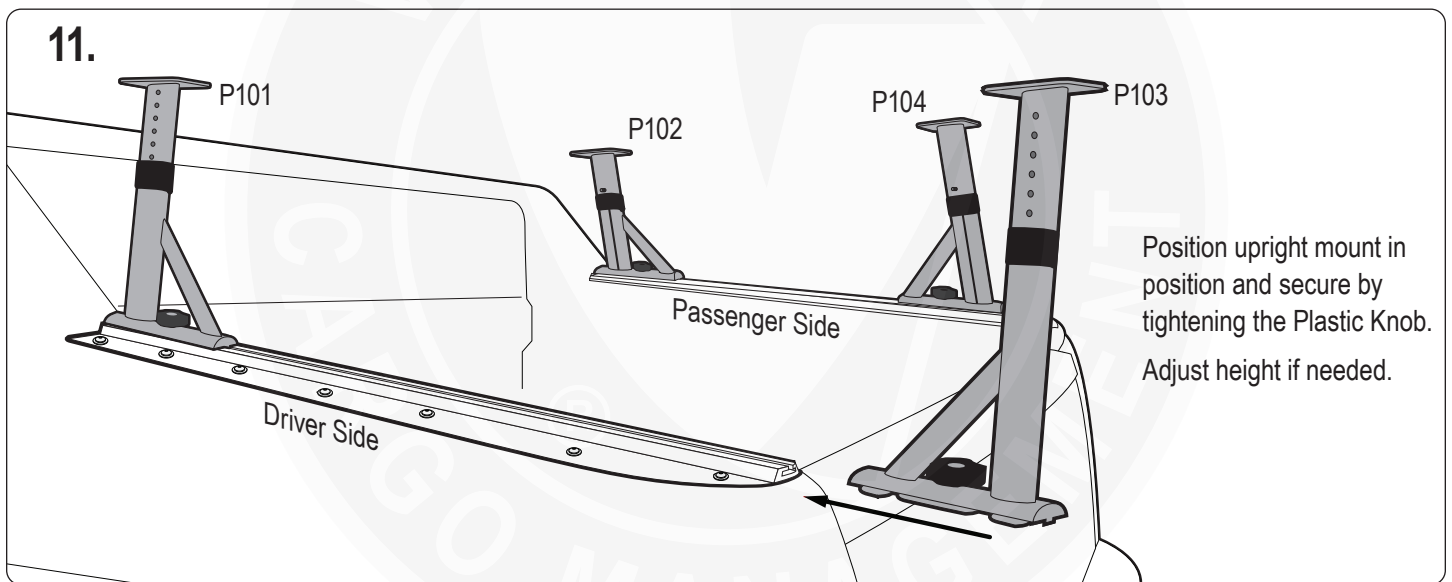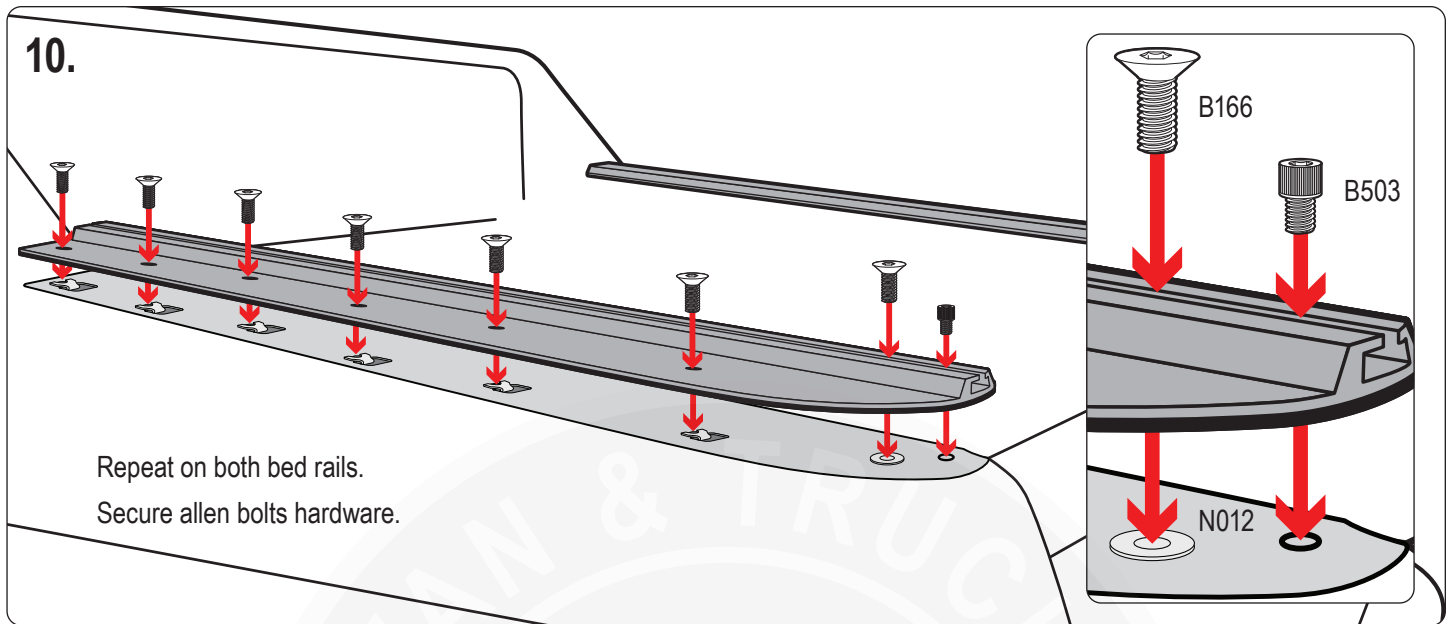


13.

4X

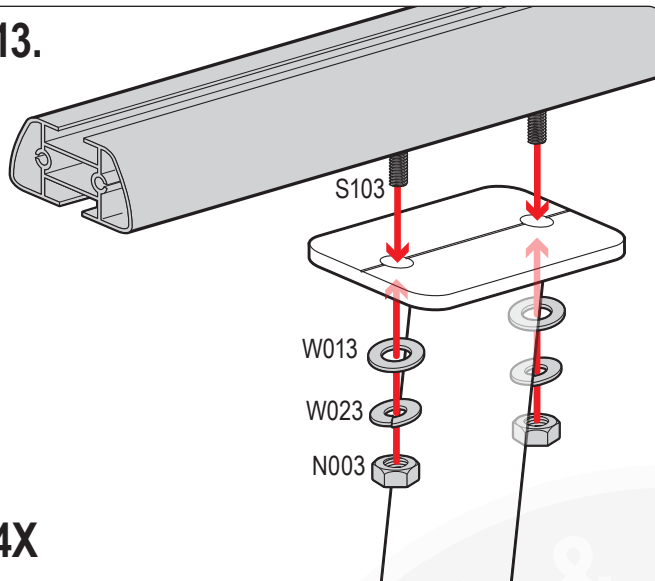

14.


4X

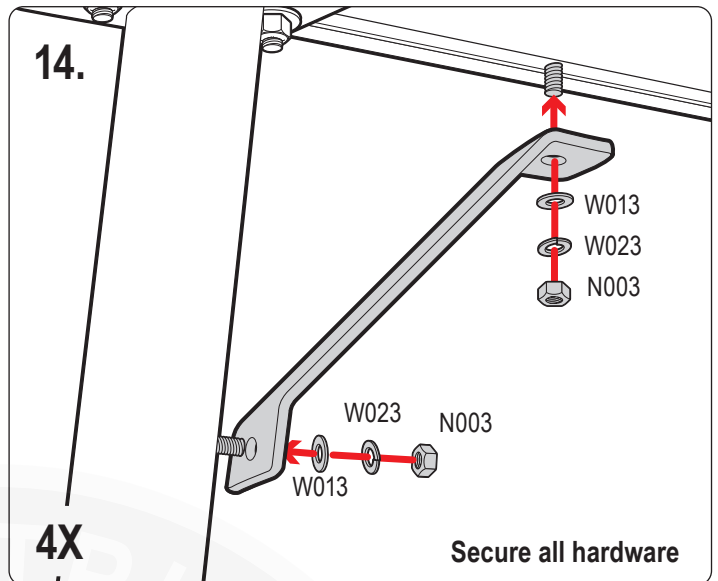


Secure all hardware

15.

4X

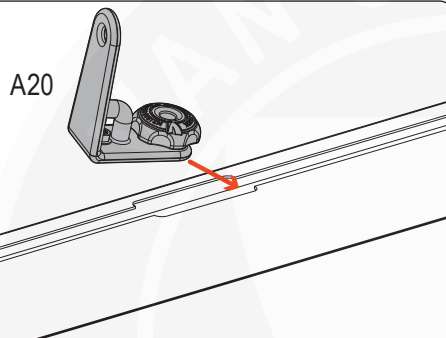


16.

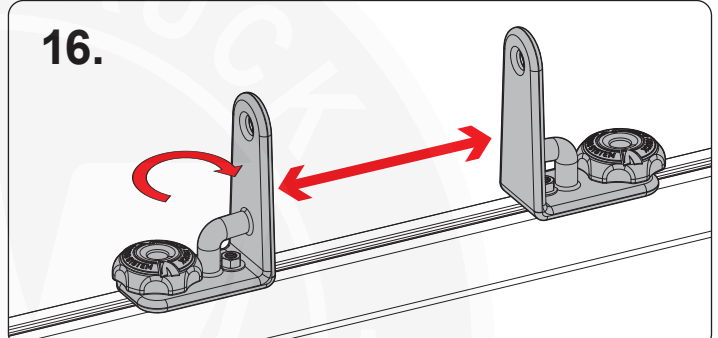


17.

4X

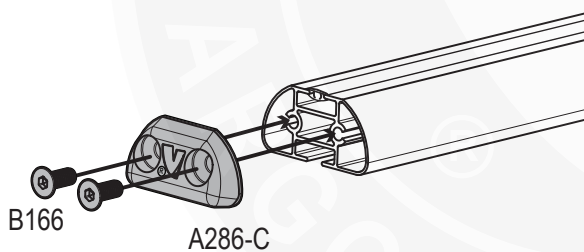

After adjusting the cross bar and uprights to align correctly and centered Tightly secure all hardware.

18.

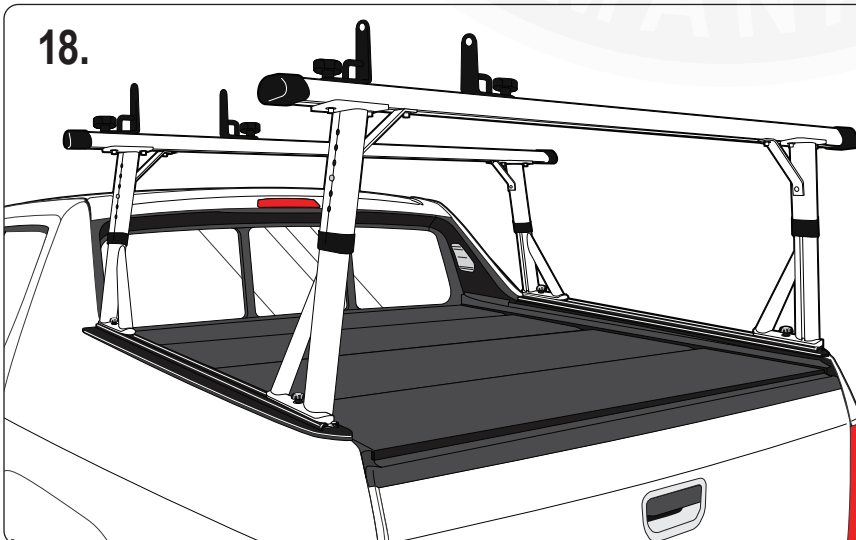

The truck bedrails taper towards the rear, loosen connections between cross bars and uprights. to allow for adjustments or removal of the rack system.