


# MALONE<sup>®</sup>

CHANGING THE WAY YOU GET THERE


## DELUXE PADDLEBOARD CARRIER

MPG171 ROOF TOP SUP BOARD TRANSPORT KIT

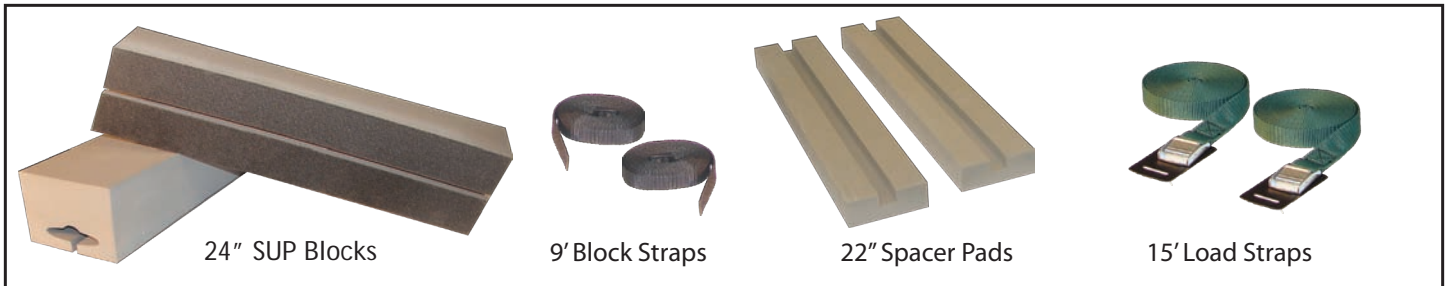

### Installation & Loading Instructions - Please Read Before Beginning

*Installation without cross bars, see instructions 1-9. Installation with cross bars, see instructions 10-17.*

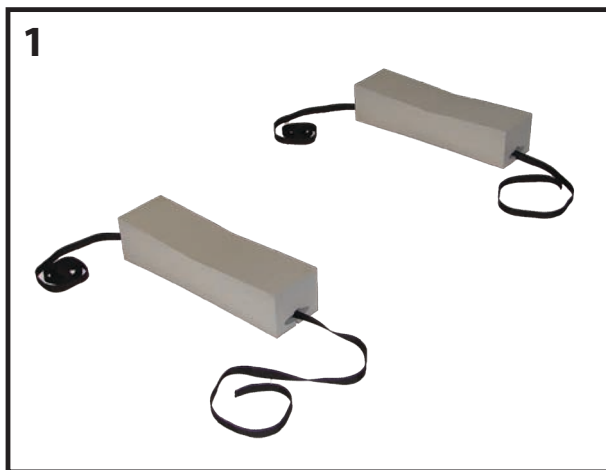


- Place the SUP onto the Blocks so that the bottom of the board is facing up. Align the SUP so it's weight is evenly distributed on the two Blocks. See Image 2.



### Installation without Cross Bars

- Unroll the two 9' Block Straps. Thread a Strap through the cut-out in the bottom of a 24" Block. Repeat for second Strap and Block. Measure the SUP. Position the Blocks so they are aligned and spaced apart approximately 1/3 of the total length of the SUP. See Image 1.

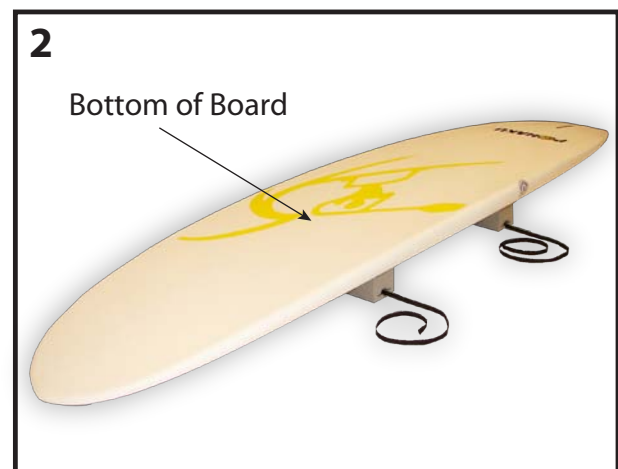

- Place the Spacer Pads on top of the SUP so that they are aligned with the Blocks. Dress the two Block Straps over the Pads. Dress the Strap free ends through the buckles and tighten. See Image 3.

**NOTE:** The Spacer Pads are only required when transporting two SUP's.

# MALONE<sup>®</sup>

CHANGING THE WAY YOU GET THERE

## Installation & Loading Instructions - MPG171 Deluxe SUP Kit



### Installation without Cross Bars

- Confirm that the bottom of the Blocks and the roof of the vehicle are clean and free of dust and/or dirt that could scratch the vehicle's finish.

Place and center the SUP with Blocks onto the vehicle. See Image 4.

- Place and center the 2nd SUP onto the Spacer Pads. See Image 5.

If only one SUP is to be transported, go directly to Instruction 6.



- Unroll the two green 15' Load Straps. Open the vehicle's doors. Throw the non-buckle ends of each Strap up and over the SUP(s) and down to the other side of the vehicle.

The Load Straps and the Blocks should be as closely aligned as possible. See Image 6.

# MALONE<sup>®</sup>

CHANGING THE WAY YOU GET THERE

## Installation & Loading Instructions - MPG171 Deluxe SUP Kit



### Installation without Cross Bars

- With the doors open, pull the free end of each Load Strap back through the vehicle.

You should now have two continuous Strap loops dressed over the SUP board(s) and through the vehicle. See Image 7.

- Insert the free end of each Load Strap up and through each buckle. Pull the free end down to tighten. See Image 8.

For best results, tighten both straps at the same time, going back and forth until both Straps are firmly tight and the boards are fully secure.

The free ends of the Straps can now be dressed into the vehicle and the doors shut.



- Always check the Load Straps and SUP boards for proper and secure attachment before transport. See Image 9.

Limit travel to 150 miles or less. Check the boards after the first 5 miles to confirm the transport is correct and safe.

# MALONE<sup>®</sup>

CHANGING THE WAY YOU GET THERE

## Installation & Loading Instructions - MPG171 Deluxe SUP Kit



10

### Installation with Cross Bars


- Place the 24" Blocks onto the cross bars with the bottom cut-outs fully inserted over each bar. Center the Blocks in the middle of both cross bars. See Image 10.

**NOTE:** The cross bars should be spaced a minimum of 30" apart.

- Place the SUP onto the Blocks so that the bottom of the board is facing up. Align the SUP so its weight is evenly distributed on the two Blocks. See Image 11.



11

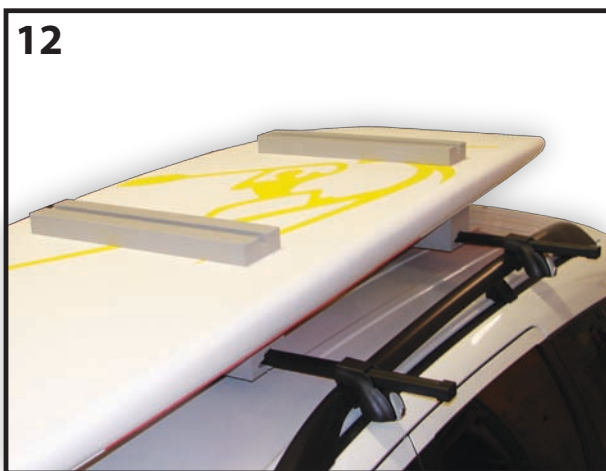

12

- Place and center the two Spacer Pads onto the top of the SUP mounted on the blocks. See Image 12.

If only one SUP is to be transported, go directly to Instruction 14.



# MALONE®

CHANGING THE WAY YOU GET THERE


## Installation & Loading Instructions - MPG171 Deluxe SUP Kit



### Installation with Cross Bars

- Place and center the 2nd SUP onto the Spacer Pads. Confirm that the 2nd SUP is aligned and it's weight is evenly distributed on the Pads. See Image 13.

- Unroll the 15' green Load Straps. Dress a Strap free end under a cross bar and back up to make a loop. Pull the loop even and place over the top and down the other side of the SUP(s). Repeat for the second Load Strap. See Image 14.

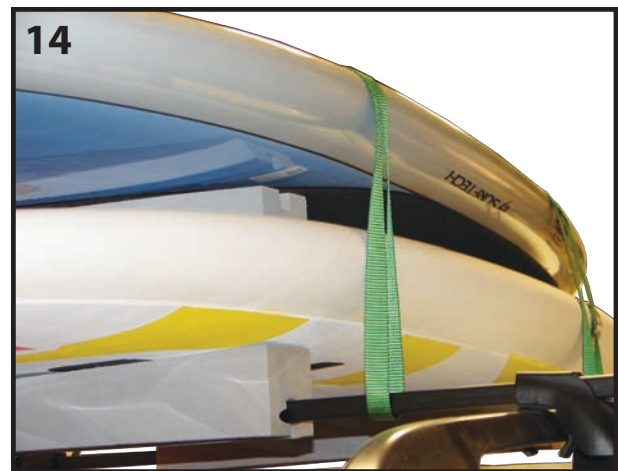

- Both Load Strap loops should now be positioned over the SUP(s). See Image 15.

## Installation & Loading Instructions - MPG171 Deluxe SUP Kit



### Installation with Cross Bars

- Pull the free end of a Load Strap down until the buckle is positioned approximately 6" above the cross bar.

Insert the Strap free end up and through the buckle. Pull down to tighten. Repeat for second Strap.

Confirm the boards are secure and the Straps are firm before transport. See Image 16.

NOTE: For added security, dress the extra strap around the cross bar and form a knot.

- The free ends of the Straps can now be placed into the vehicle and the doors shut. See Image 17.



Always inspect mounting hardware, cross bars and load straps for proper and secure attachment before and during transport. Use of this product for any other application other than watersport carrier transport voids warranty.

Warning: All vehicular rooftop transports are potentially hazardous. Any person using MALONE automotive transport systems is personally responsible for following the given directions for use and installation and accepts full and complete responsibility for any and all damages or injury of any kind including death, which may result from their use.

# MALONE<sup>®</sup>

## CHANGING THE WAY YOU GET THERE

### Limited One Year Warranty

*The Malone Auto Racks (Malone) Limited One Year Warranty covers certain Malone-brand products that have been specifically identified for inclusion in the program and is effective for one year from the date of purchase for the original retail purchaser. This warranty is terminated after one year from the date of purchase, or, when the original retail purchaser sells or otherwise transfers the product to any other person or entity during the one year warranty period.*

Subject to the limitations and exclusions described in this warranty, Malone will remedy defects in materials and/or workmanship by repairing or replacing, at its option, a defective product without charge for parts or labor. Malone may elect, at its option, not to repair or replace a defective product but rather issue to the original retail purchaser a refund equal to the purchase price paid for the product, or credit to be used toward the purchase of a replacement Malone product.

This warranty does not cover, and no warranty is given for defects or problems caused by normal wear and tear which includes but is not limited to surface (aesthetic) metal corrosion, scratches, dents, deformities, accidents, unlawful vehicle operation, or any modification of a product not performed or authorized in writing by Malone.

In addition, this warranty does not cover problems resulting from conditions beyond Malone's control including, but not limited to, theft, misuse, overloading, or failure to assemble, mount or use the product in accordance with Malone's written instructions or guidelines included with the product available to the original retail purchaser.

No warranty is given for Malone products purchased outside of the United States, Canada and Mexico.

If the product is believed to be defective, the original retail purchaser should contact the Malone dealer from whom it was purchased, who will give the original retail purchaser instructions on how to proceed. If the original retail purchaser is unable to contact the Malone dealer, or the dealer is not able to remedy the defect, the original retail purchaser should contact Malone by email at [technical@maloneautoracks.com](mailto:technical@maloneautoracks.com).

In the event that the product must be returned to Malone, a technician at the email address above will provide the original purchaser with return shipping instructions. The original purchaser will be responsible for the cost of mailing the product to Malone. In order to receive any remedy under this warranty, a copy of the original purchase receipt, a description of the defect and a return address must be provided.

### Disclaimer of Liability

Repair or replacement of a defective product, or the issue of a refund or credit (as determined by Malone) is the original retail purchaser's exclusive remedy under this warranty. Damage to original purchaser's vehicle, cargo, or property, and/or to any other person or property is not covered by this warranty.

This warranty is expressly made in lieu of any and all other warranties, express or implied, including the warranties of merchantability and fitness for a particular purpose.

Malone's sole liability is limited to the remedy set forth above. In no event will Malone be liable for any direct, indirect, consequential, incidental, special, exemplary, or punitive damages, or, for any other damages of any kind or nature (including but not limited to, lost profits, lost income or lost sales).

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not be applicable. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

In addition, all vehicular transports are potentially hazardous. Any person using MALONE products are personally responsible for following the given directions for use, installation and accepts full responsibility for any and all damages or injury of any kind including death, which may result from their use.