



Engineered to Deliver

Built by


**MALONE**  
CHANGING THE WAY YOU GET THERE®

## Kayak Saddles with T-Rack Mounting Hardware



**A**

Place Washers on Bolts.  
Insert as shown

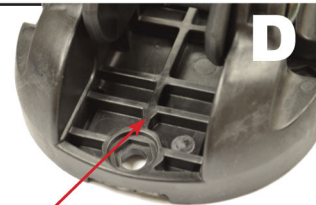

**D**

Directional Arrow  
towards the Inside



**B**

Install Square Nuts on Bolts



**C**

Align Nuts to Channel and  
Install Saddle



**E**

Firmly Tighten with Wrench

Components Included: (4) Kayak Saddles - (8) Mounting Bolts - (8) Washers  
(8) Square Nuts - (2) Cam Buckle Load Straps - (2) Safety Tie-Downs

### INSTALLATION INSTRUCTIONS

1. Remove the cross bar end cap from one side of the front cross bar.
2. Assemble a saddle by installing two Bolts with Washers through the topside Base as shown (see Image A).
3. Install a Square Nut onto each Bolt from the bottom side of the Base (see Image B). NOTE: The Nuts will be tight when first applied. Use supplied Allen Wrench to thread the Nut onto the Bolt.
4. With the Saddle, align the Nuts with the cross bar t-channel and slide into place (see Image C). Note: The Saddle must be oriented with the Directional Arrow (see Image D) pointing towards the inside of the roof. Note: The Nut is designed to fit both styles of T-slot. Rotate to find correct fit.
5. Install the second Saddle with the Arrow pointing towards the inside. The end result is two Saddles with the arrows facing inward, loosely positioned on the front cross bar.
6. Repeat all above steps for the rear cross bar so that all four saddles are installed on the front and rear cross bars.
7. Gently place the kayak onto the cross bars. Position the saddles under the kayak and firmly tightening all eight Bolts with Hex Wrench provided (see Image E). Replace front and rear cross bar end caps.
8. Finish by dressing the front and rear Load Straps under the cross bars and up and over the kayak.
9. For added security, install the supplied Safety Tie-Downs per attached instructions.

MALONE AUTO RACKS, 81 County Road, Westbrook, Maine 04092

Phone: 207-774-9100 Fax: 207-615-0551

Website: [www.maloneautoracks.com](http://www.maloneautoracks.com) Email: [technical@maloneautoracks.com](mailto:technical@maloneautoracks.com)

# MALONE®

CHANGING THE WAY YOU GET THERE


## MPG306 BOW & STERN LINE KIT



### Attach hook to rope (steps A-D)



Thread free end of cord through hook.

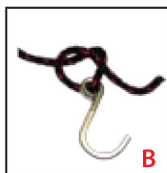

Create a "left over right" knot & tighten.



Create a "right over left" knot & tighten.




Pull to test for knot strength.


### Attach and dress rope to vehicle and boat (steps E-O)




Attach S-hook to vehicle tow ring or other sturdy body part.

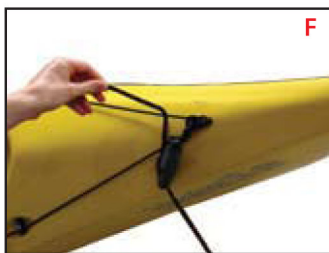


Keeping the rope tight and S-hook in place, thread the free end up and through a strong point on the kayak

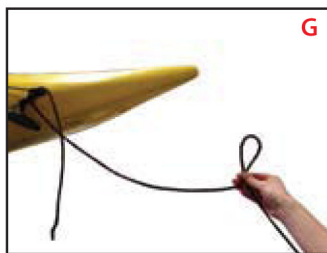


Make a loop in the rope 12" to 14" away from the kayak or canoe.

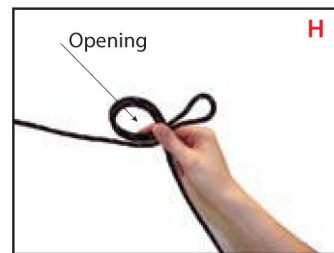

Bend the loop over leaving a large opening as shown.

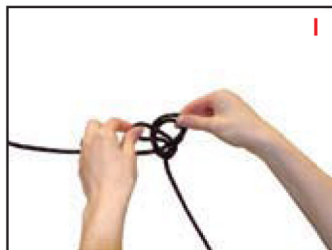


Pass the loop through the opening.

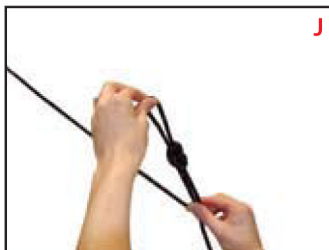

Pull to create a tight knot.



Thread the free end of the rope through the loop.

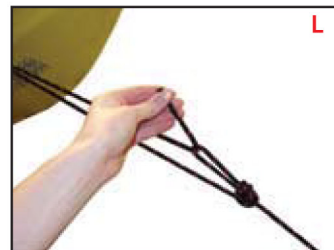


Pull the free end up until the rope is sufficiently tight.



Hold the rope secure with one hand.



Form a knot with the free end and tighten. Form a second knot for safety purposes.

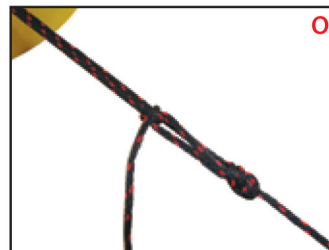

The line should be tight and secure. Repeat for second tie-down.

MALONE AUTO RACKS, 81 County Road, Westbrook, Maine 04092

Phone: 207-774-9100 Fax: 207-615-0551

Website: [www.maloneautoracks.com](http://www.maloneautoracks.com) Email: [technical@maloneautoracks.com](mailto:technical@maloneautoracks.com)